

BRANDON

23437432, 23437449, 23437456, 23478879

23478886, 23481473, 23800960, 23800946, 23478862

Thank you for purchasing the BRANDON Dining chair . Before you begin to assemble your new piece of furniture, please check to ensure that all hardware and parts have been supplied. The following page lists all contents included in the carton(s).

Follow instructions closely as deviation from them may present a possible safety risk and may void your warranty.

It is recommended that assembly is done on a soft surface such as carpet to avoid any damage.

If you experience any problems with your new purchase, please contact Freedom Customer Service via livechat@freedom.com.au (Australia) or 0800 469 327 (New Zealand)

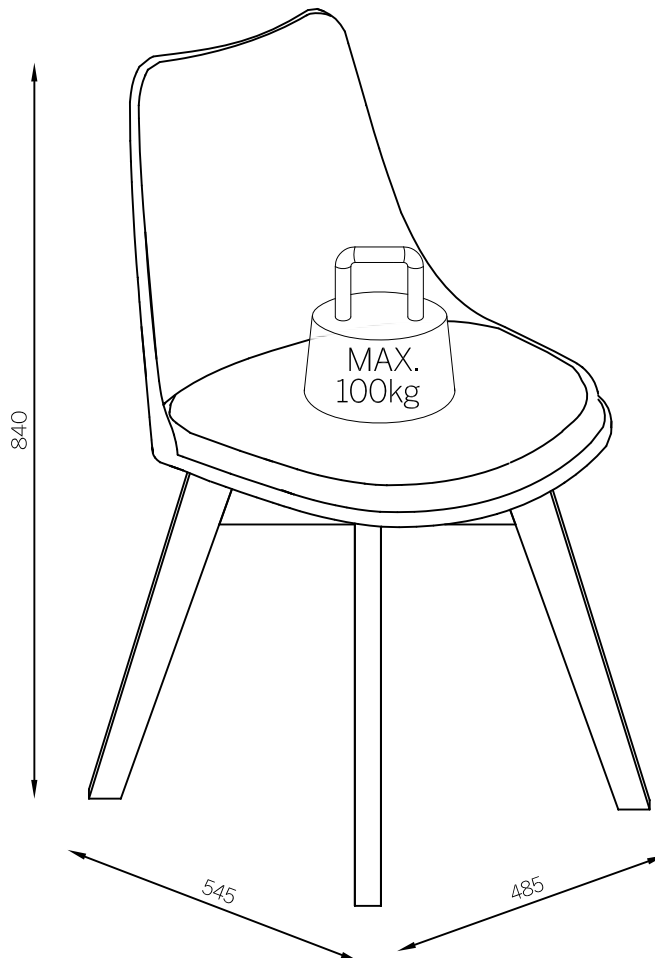
Care Information

Periodically check and re-tighten any fasteners. Dust weekly using a soft, clean cloth. Do not use harsh abrasives, chemicals or polishes containing silicone. Avoid direct sunlight as this may cause the timber to change colour. It is important to remove moist substances immediately.

Always carefully lift furniture when moving it around the home and never drag.

Use floor protectors on the bottom of furniture (like tables and chairs) to minimise damage to floor coverings.

Use coasters, place mats, tablecloths and table runners to protect furniture surfaces from heat and stains








045 Rev 10

BRANDON

23437432, 23437449, 23437456, 23478879


23478886, 23481473, 23800960, 23800946, 23478862

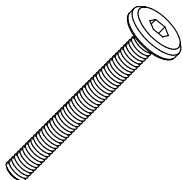 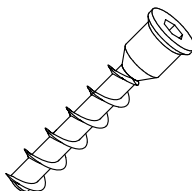 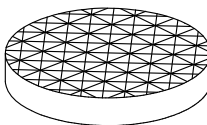Hardware (Supplied)

<p>A x 4</p>  <p>M6x50 mm</p>	<p>B x 4</p>  <p>M6/Ø14 mm</p>	<p>C x 1</p>  <p>Ø5x40 mm</p>	<p>D x 1</p>  <p>4 mm</p>
<p>E x 4</p>  <p>Ø20x3 mm</p>			

Parts

			✓
1	1	480x530x535	
2	1	605x410x28	
3	1	605x410x28	


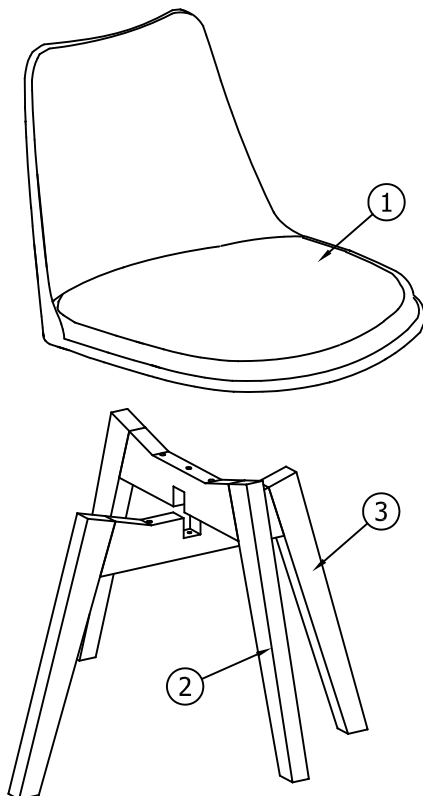


BRANDON

23437432, 23437449, 23437456, 23478879

23478886, 23481473, 23800960, 23800946, 23478862

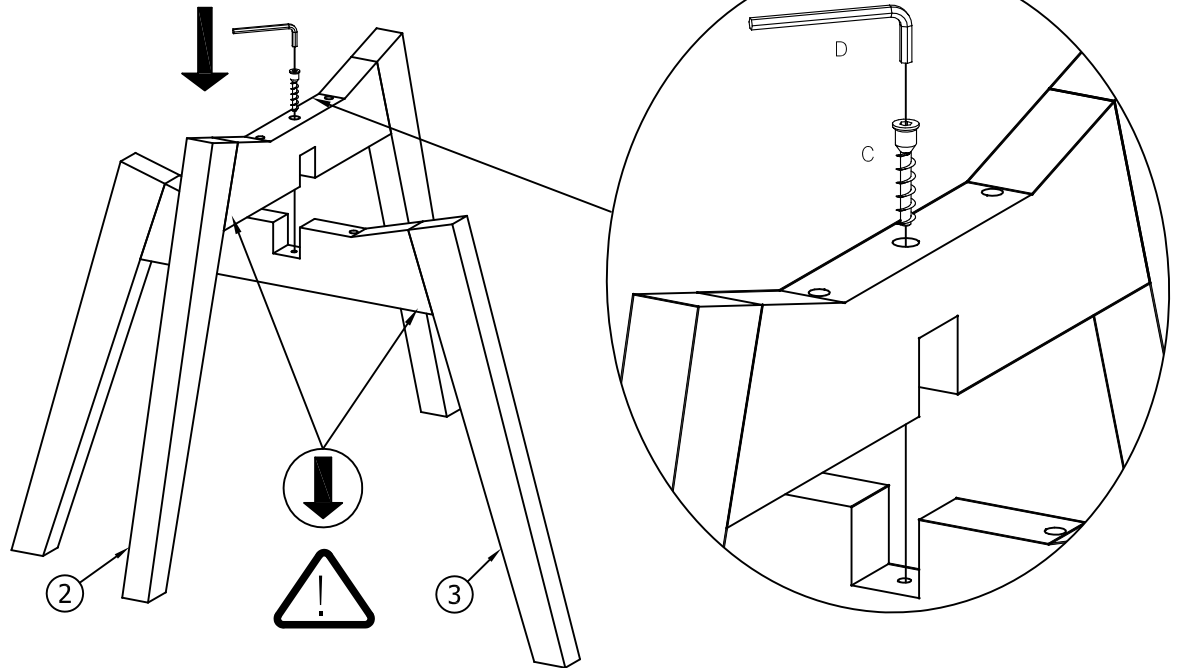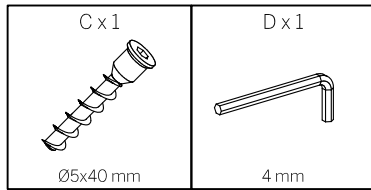Step 1



Step 2

