

# BUTTON WALL HOOK 7.5CM ASH

23736849

Thank you for purchasing the **BUTTON WALL HOOK 7.5CM ASH**. Before you begin to assemble your new piece of furniture, please check to ensure that all hardware and parts have been supplied. This page lists all contents included in the carton(s).

Follow instructions closely as deviation from them may present a possible safety risk and may void your warranty.

It is recommended that assembly is done on a soft surface such as carpet to avoid any damage.

If you experience any problems with your new purchase, please phone Freedom Customer Service (FCS) on 1300 135 588 (Australia) or 0800 469 327 (New Zealand).

 
## Care Information

Walls are constructed from different materials e.g. Masonry (solid brick) or plaster board lined cavity walls (hollow). It is important that use the appropriate wall fixings for your wall type. Your local hardware store will have the necessary drills and fixings and can offer advice if needed. Freedom recommends installation is completed by a tradesperson with relevant experience.

## Hardware (Not Supplied)




**x 1 pc**




**x 1 pc**
 
## Tools Required (Not Supplied)



## Parts

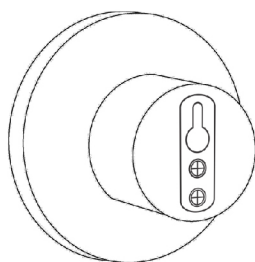


**x 1 pc**

# BUTTON WALL HOOK 7.5CM ASH

23736849

1

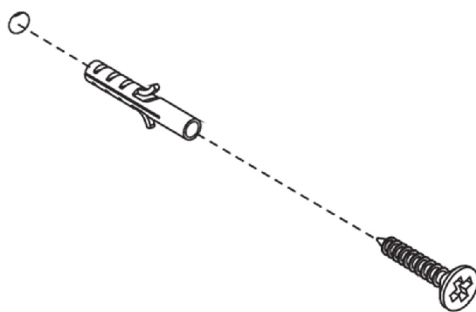

2

