

Sandi Laundry Hamper

23813328

23813281

FREEDOM

Thank you for purchasing the **Sandi Laundry Hamper**. Before you begin to assemble your Laundry Hamper please check to ensure that all hardware and parts have been supplied. This page lists all contents included in the carton(s).

Follow instructions closely as deviation from them may present a possible safety risk and may void your warranty.

 
It is recommended that assembly is done on a soft surface such as carpet to avoid any damage.

If you experience any problems with your new purchase please phone Freedom Customer Service (FCS) on 1300 135 588. Customers outside Australia should contact their closest Freedom store.

Care Information

Before you begin, read over the instruction step by step. Product should be assembled by an adult. Do not use if any part is damaged or missing, and do not substitute parts. Check all fixtures and fitting regularly and tighten if necessary. Do not place in direct sunlight. Dust surfaces regularly using a soft cloth. Please retain instruction leaflet for future reference. Washing instruction for part ⑥, please refer to washing label.


Hardware (Supplied)




A x12pcs



 B x12pcs




C x2pcs

 


D x2pcs

 
Tools Required (Not Supplied)




Parts

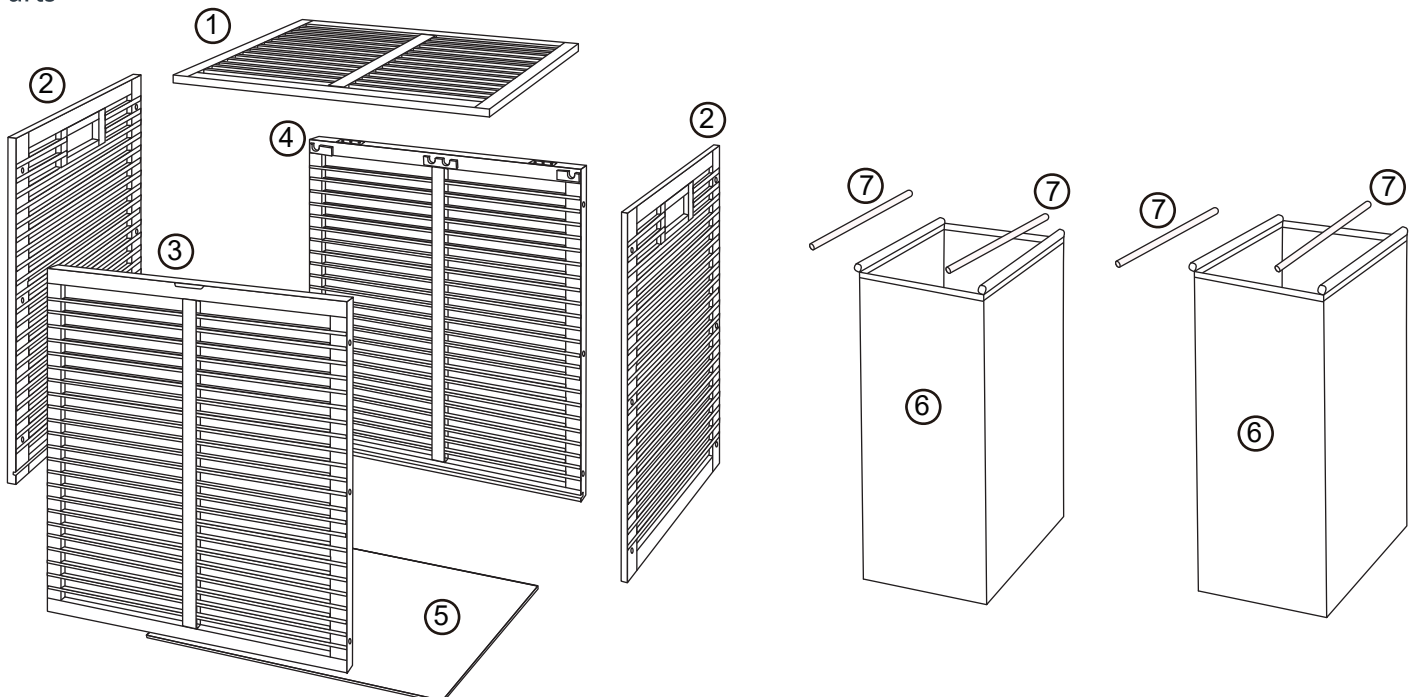


Step 1.

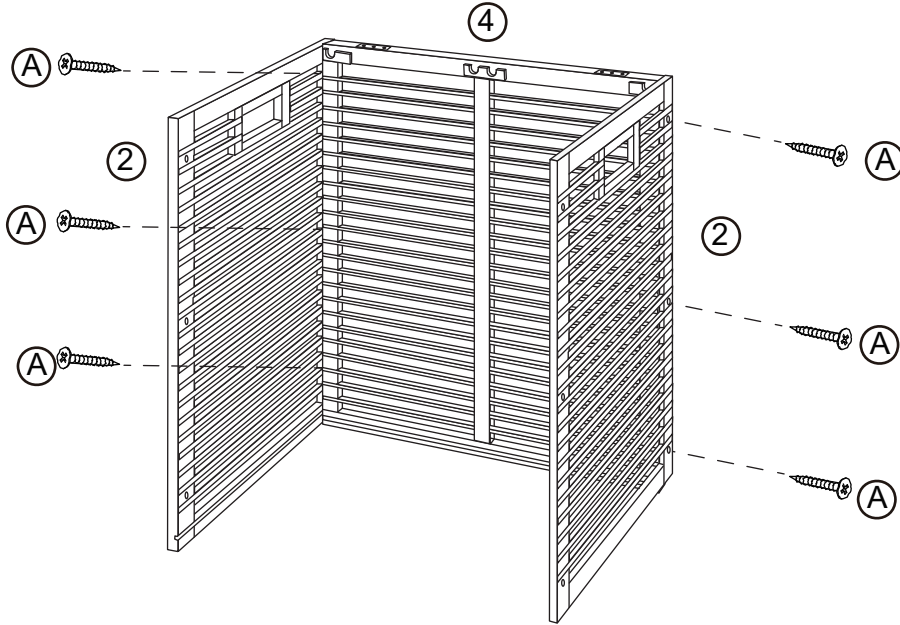


Step 2.

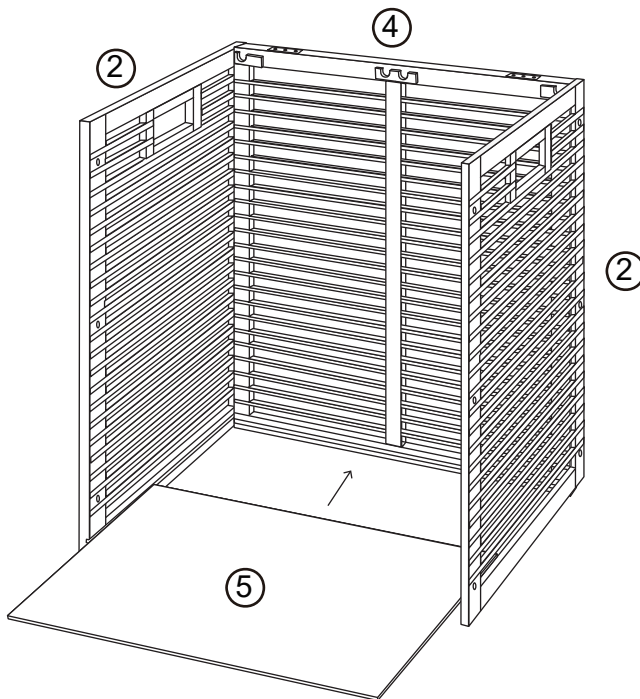


Step 3.

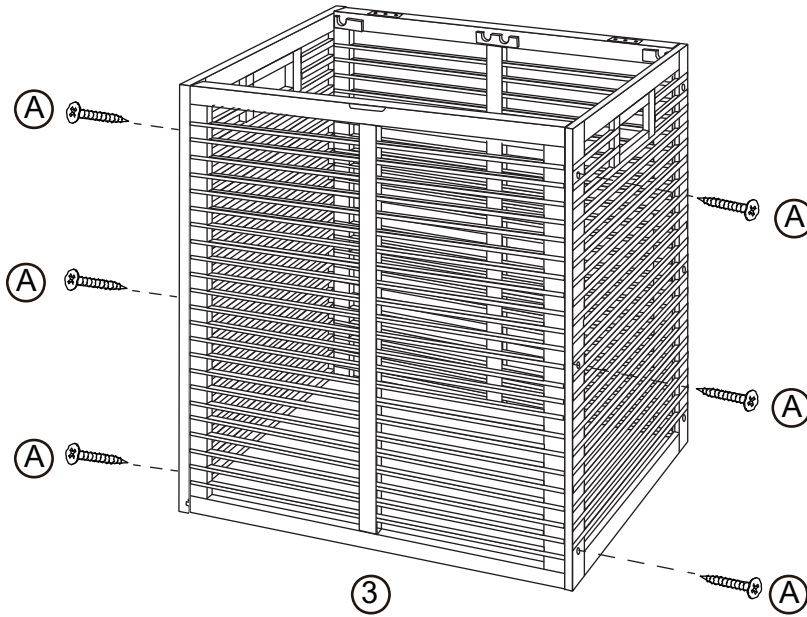


Step 4.

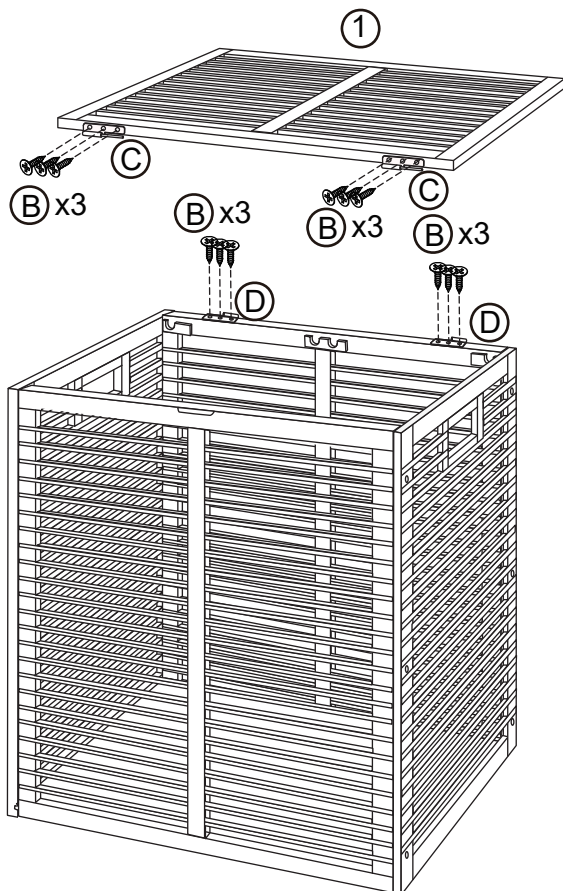


Step 5.

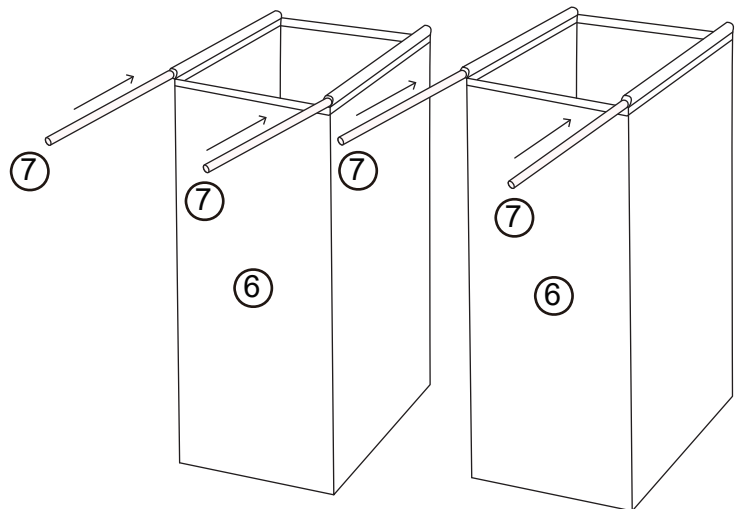

Step 6.

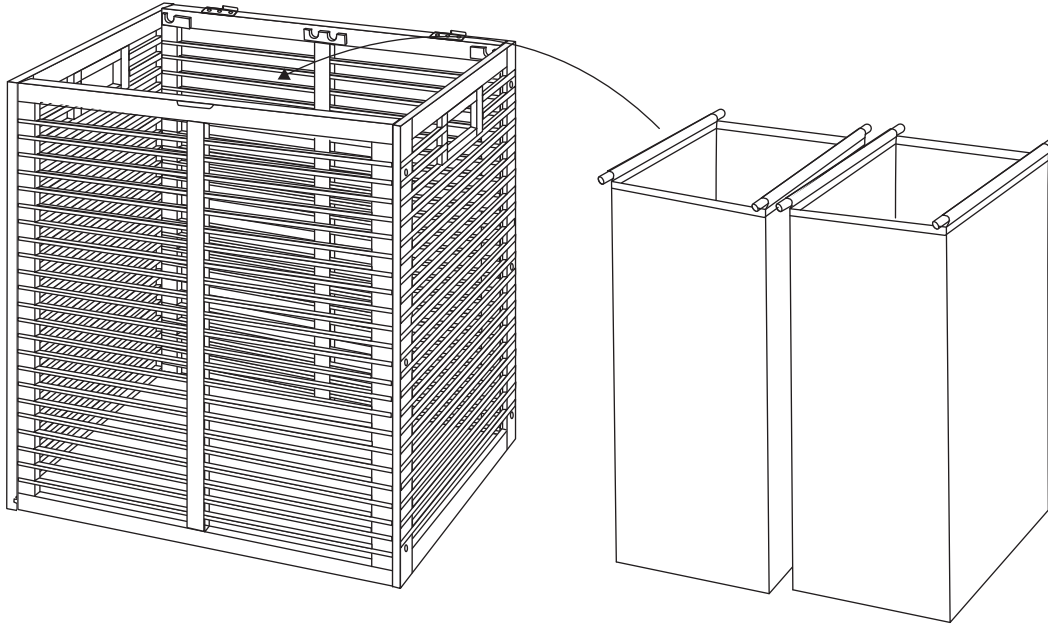

Step 7.

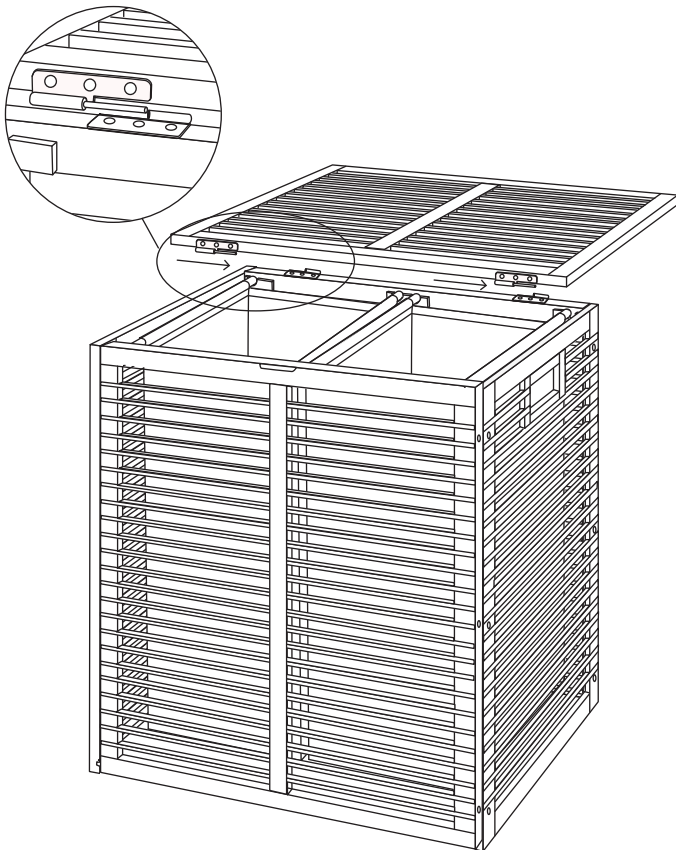

Step 8.

