## **Christine Laundry Hamper**

### 23813342

Thank you for purchasing the **Christine Laundry Hamper**. Before you begin to assemble your new Laundry Hamper please check to ensure that all hardware and parts have been supplied. This page lists all contents included in the carton(s).

Follow instructions closely as deviation from them may present a possible safety risk and may void your warranty.

 $\mu$ It is recommended that assembly is done on a soft surface such as carpet to avoid any damage.

If you experience any problems with your new purchase please phone Freedom Customer Service (FCS) on 1300 135 588. Customers outside Australia should contact their closest Freedom store.

#### **Care Information**

Wipe down surfaces regularly with a damp cloth

Can't washing (Marked in washing label) .

Max loading weight: 15kgs

#### Hardware (Supplied)







A x1pc

B x12pcs

#### **Parts**

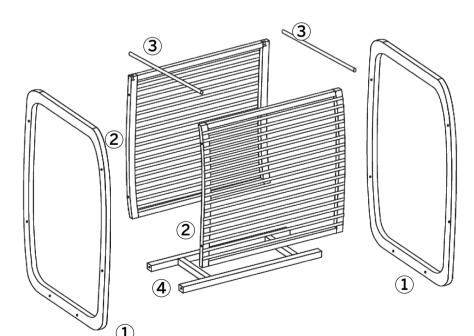

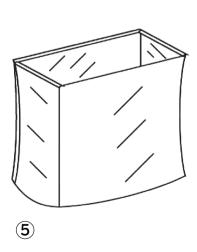


# **Christine Laundry Hamper**





Step 1.

Step 2.

Step 3.

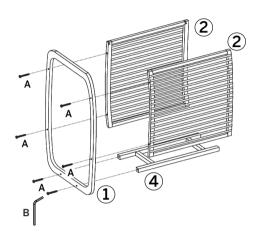

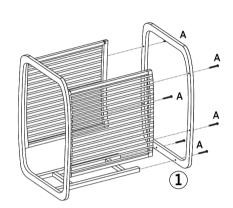

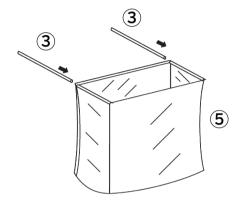

Step 4.

Step 5.

