

COSH TABLE LAMP 30CM

24301862/24301855/24301916/24301923/24382878

Thank you for purchasing the Cosh Table Lamp 30cm. Before you begin to assemble your new lamp, please check to ensure that all hardware and parts have been supplied. This page lists all contents included in the carton(s).

Follow instructions closely as deviation from them may present a possible safety risk and may void your warranty.

It is recommended that assembly is done on a soft surface such as carpet to avoid any damage. If you experience any problems with your new purchase please phone Freedom Customer Service(FCS) on 1300 135 588 (Australia) or 0800 469 327 (New Zealand)

Care Information:

Periodically check and re-tighten all fasteners. Wipe down surfaces using a clean cloth weekly. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard. Ensure screws are fastened firmly as small parts may present a choking hazard.

Replacing the bulb:

Disconnect the plug from the electrical supply and allow the bulb and lamp to cool down, Replace the bulb with an **E14 MAX 40W Incan** or **E14 MAX 6W LED** . Re-connect the supply and turn on.

Specifications:

230-240V AC 50Hz

IP20-Indoor Use only 

E14 MAX 40W 

E14 Max.6W  (bulb not included)

Class II protection

