

COSH FLOOR LAMP

24302630,24305129

FREEDOM

Thank you for purchasing the **Cosh Floor Lamp**. Before you begin to assemble your new lamp, please check to ensure that all hardware and parts have been supplied. This page lists all contents included in the carton(s).

Follow instructions closely as deviation from them may present a possible safety risk and may void your warranty.

It is recommended that assembly is done on a soft surface such as carpet to avoid any damage. If you experience any problems with your new purchase please phone Freedom Customer Service(FCS) on 1300 135 588 (Australia) or 0800 469 327 (New Zealand).

Care Information:

Periodically check and re-tighten all fasteners. Wipe down surfaces using a clean cloth weekly. The external flexible cable or cord of this luminaire can not be replaced, If the cord is damaged, the luminaire shall be destroyed.

Leave the wires at the bottom as long as possible. Connect the metal stems from top to bottom. Finally, make the twist wire straight, and then pull the wire out of base from the side.

Replacing the bulb:

Disconnect the plug from the electrical supply and allow the bulb and lamp to cool down, Replace the bulb with two **E27 MAX 40W Incan.**

Re-connect the supply and turn on.

Specifications:


230V~240V AC 50Hz

IP20-Indoor Use only 

E27 2 x MAX.40W  (bulb not included)

Class II protection

①

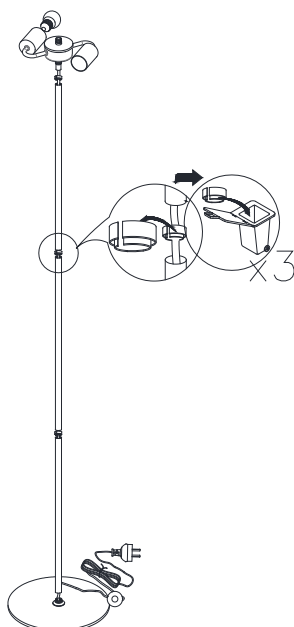

②



③

