

## PIXEL SIDE TABLE BLACK/WHITE

24425131/24425148

Outdoor



Thank you for purchasing the **Pixel Side Table Black/ White**. Before you begin to assemble your new piece of furniture, please check to ensure that all hardware and parts have been supplied. This page lists all contents included in the carton(s).

Follow instructions closely as deviation from them may present a possible safety risk and may void your warranty.

It is recommended that assembly is done on a soft surface such as carpet to avoid any damage.

If you experience any problems with your new purchase, please contact Freedom Customer Service via [livechat@freedom.com.au](mailto:livechat@freedom.com.au) (Australia) or 0800 469 327 (New Zealand).

 
### Care Information

#### This product is suitable for Full Outdoor Use

We test all our outdoor ranges to ensure that they're durable and can withstand the elements. With minor care, these items can be left outdoors permanently.

- Clean and oil timber furniture regularly (at least monthly) using the Freedom Timber Outdoor Care Kit. Remove oil and dirt with a stiff brush using our 'Outdoor Timber Cleansing Wash'. Apply "Outdoor Timber Protective Oil" with a clean cloth or a paintbrush. Leave for a few hours and wipe off excess.
- Furniture made with polyester, man-made wickers and aluminium can be simply washed down with warm soapy water and left to dry naturally. This should be done on a regular basis.
- To prolong lifetime store in a dry location when not in use or during periods of inclement weather.
- Expansion and contraction of timbers will occur with changes in humidity and temperature. This can cause timber to split which is natural and not considered a fault. Over time, all wooden furniture will naturally change to a grey colour when left exposed to the elements.

#### Parts

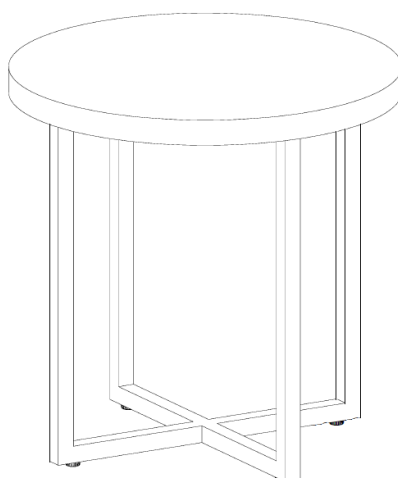

# PIXEL SIDE TABLE BLACK/WHITE

24425131/24425148

Step 1.

