

MOSMAN DINING TABLE

24595445 /24595537/24595469 /24595506

Thank you for purchasing the MOSMAN Dining Table . Before you begin to assemble your new piece of furniture, please check to ensure that all hardware and parts have been supplied. This page lists all contents included in the carton(s).

Follow instructions closely as deviation from them may present a possible safety risk and may void your warranty.

It is recommended that assembly is done on a soft surface such as carpet to avoid any damage.

If you experience any problems with your new purchase, please contact Freedom Customer Service via www.freedom.com.au (Australia) or www.freedomfurniture.co.nz (New Zealand).

Care Information

DO

 
- Use tablecloths, table runners and coasters to help protect surfaces from scratching.
- Dust once a week using a soft cloth or similar duster.
- Only use freedom recommended care products as many supermarket polishes and waxes contain high levels of silicon and petroleum distillate which can damage the surface.
- Polish your furniture every 3 to 6 months, making sure the surface is free from dust before you start.

DON'T

- Do not place hot or wet items directly on the surface as they can leave marks which are difficult to remove.
- Avoid direct sunlight, as this will cause colour change. If the furniture is in direct sunlight, move items like vases around to avoid spotting.
- Do not apply too much polish as this will build up and need to be removed with a wood-cleaning product

GENERAL

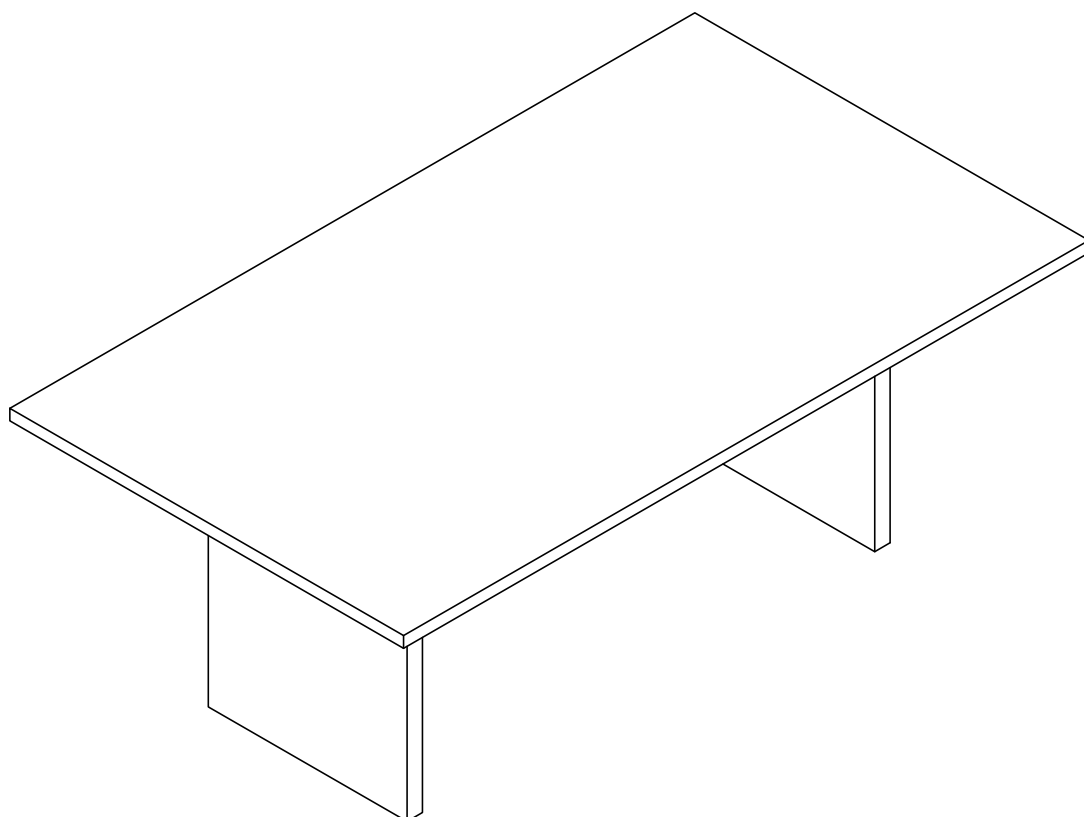

 
 
 

 

Periodically check and re-tighten all fasteners. When moving furniture always lift it rather than drag it.




MOSMAN DINING TABLE


24595445 /24595537/24595469 /24595506

Hardware (Supplied)

A×22  M8*35	B×30  Ø17*Ø8	C×1  M5	D×8  M8
E×8  M8	F×8  M8x80	G×1  (14#)	H×16  M8

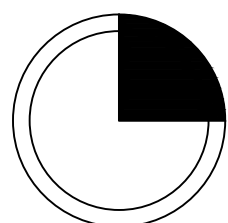 

15
min

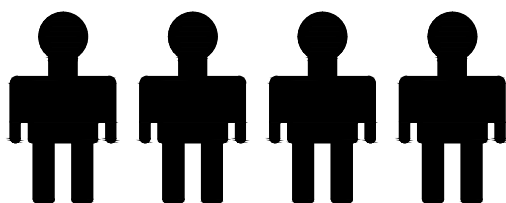 




This assembly requires four people


MOSMAN DINING TABLE

24595445 /24595537/24595469 /24595506

Parts

    Parts List

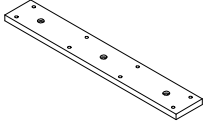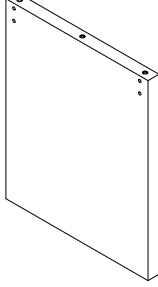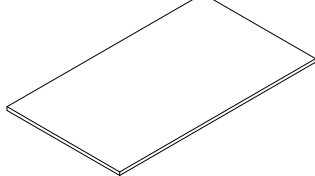

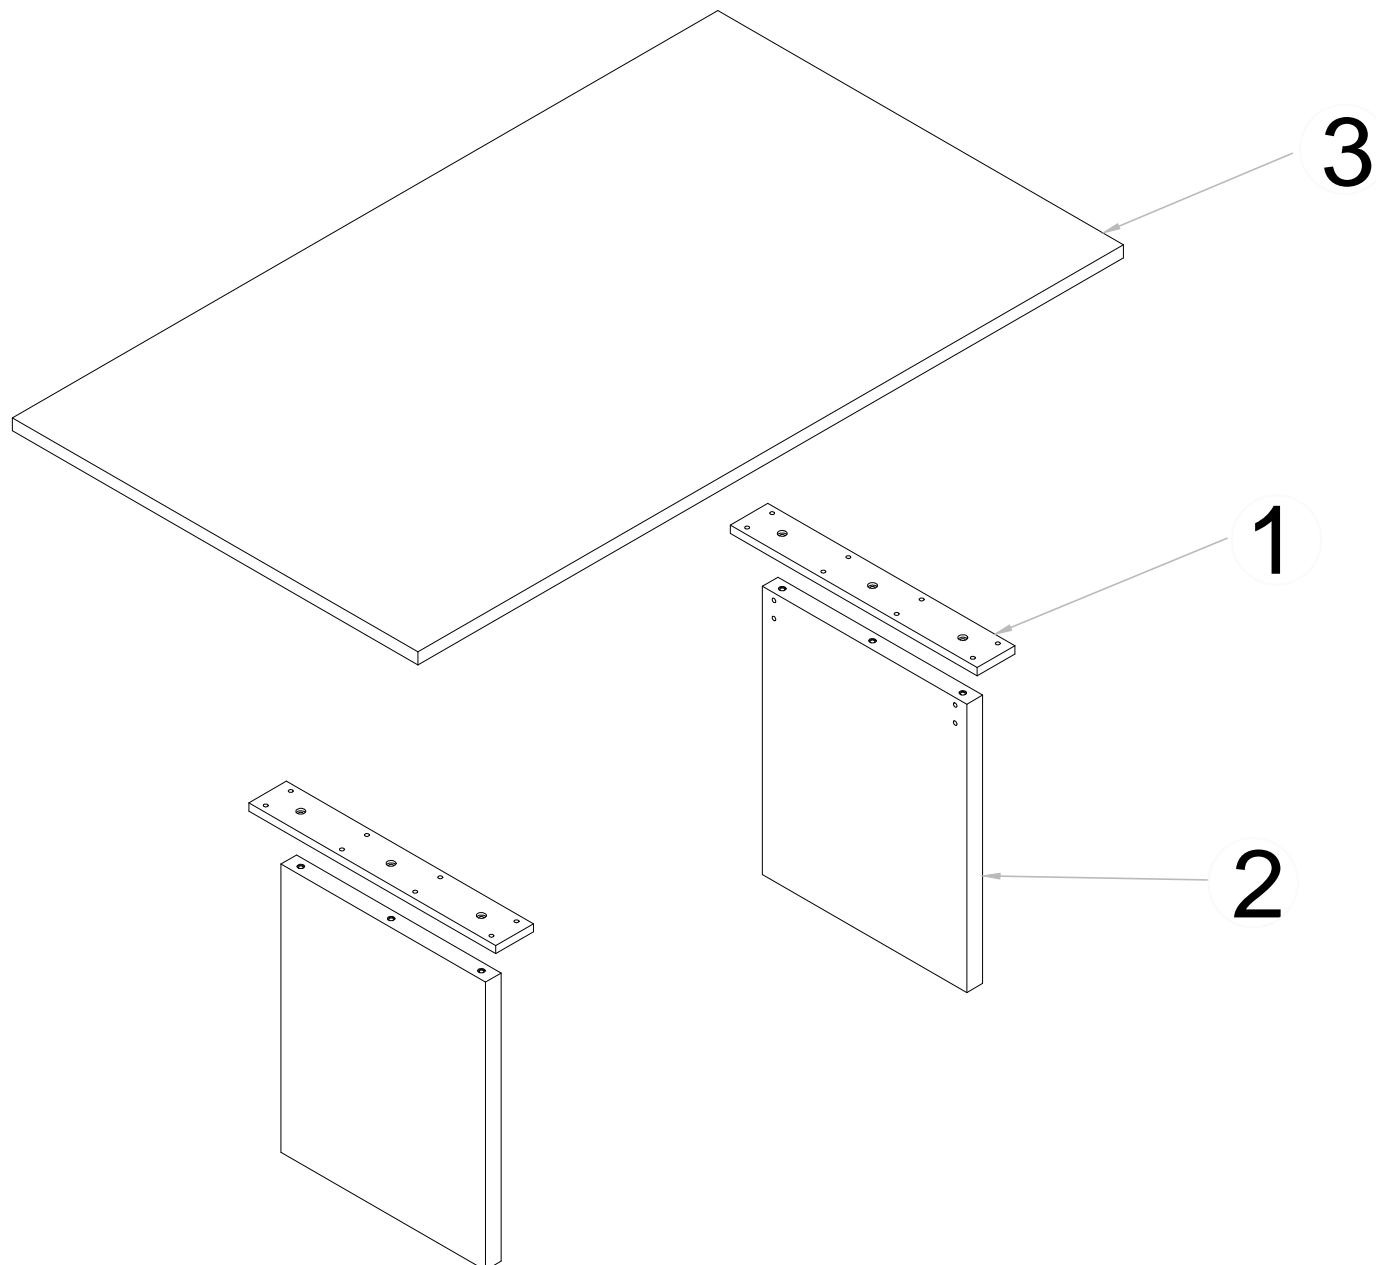
NO	Description	Qty
1	 Connection panel	2
2	 leg	2
3	 Top	1




MOSMAN DINING TABLE


24595445 /24595537/24595469 /24595506


Step 1,

A×6  M8*35	B×6  Ø17*Ø8	C×1  M5
---	--	--

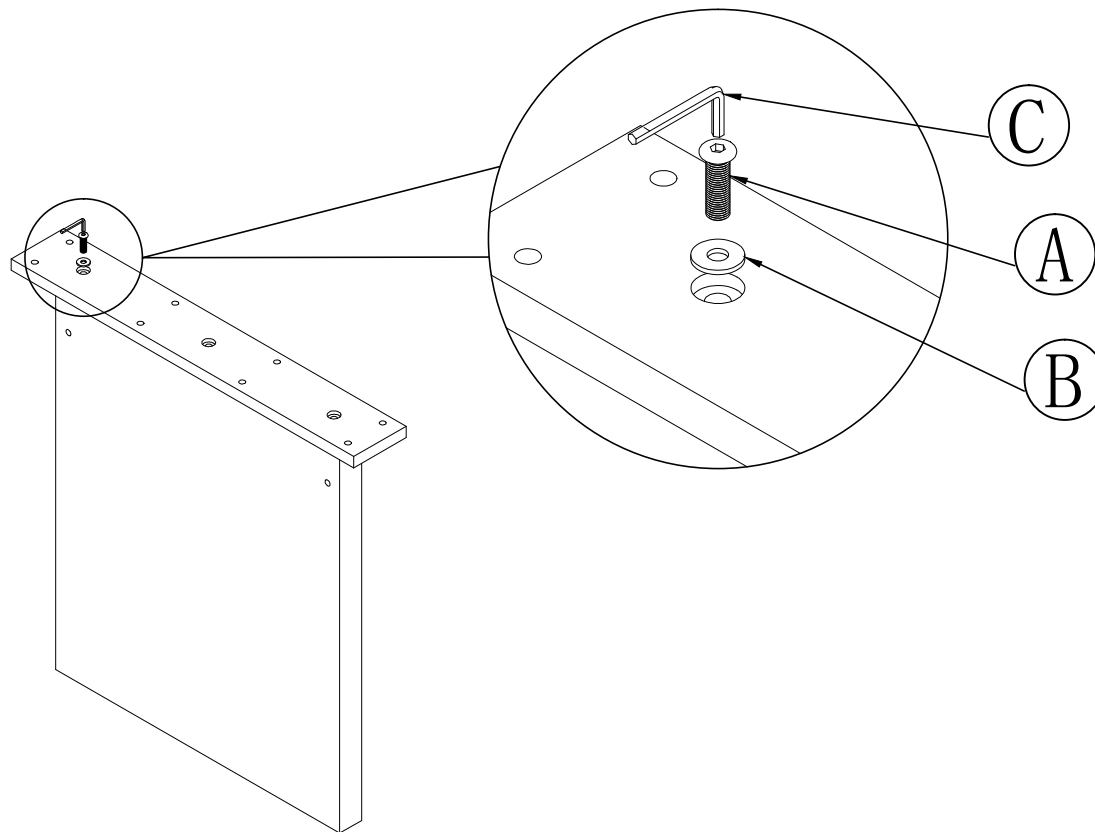 

Step 2,

  
F×8  M8x80
--

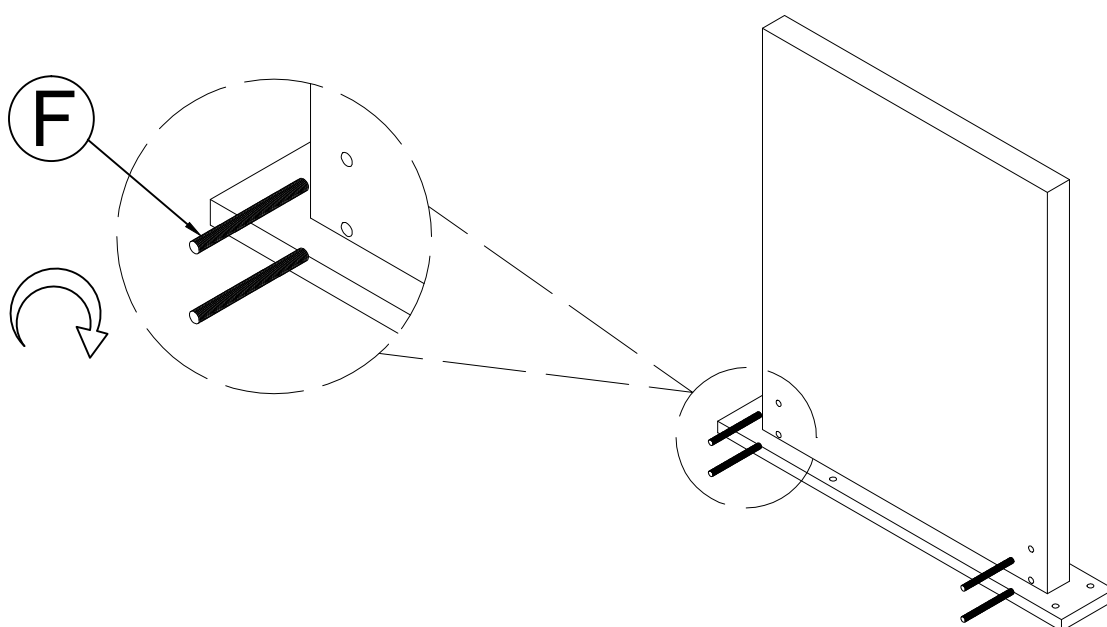


 
 
MOSMAN DINING TABLE


24595445 /24595537/24595469 /24595506

Step 3,

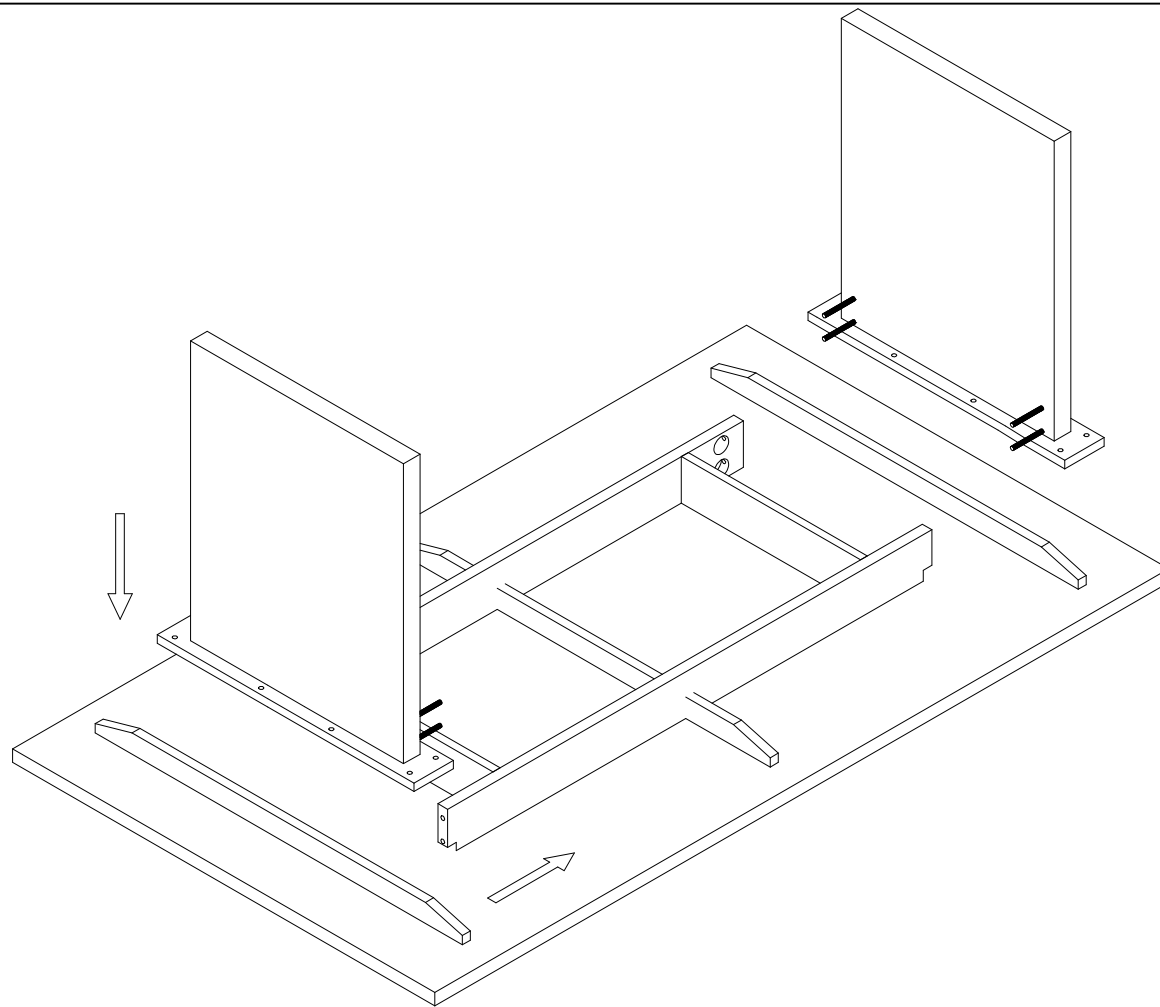

 Step 4,



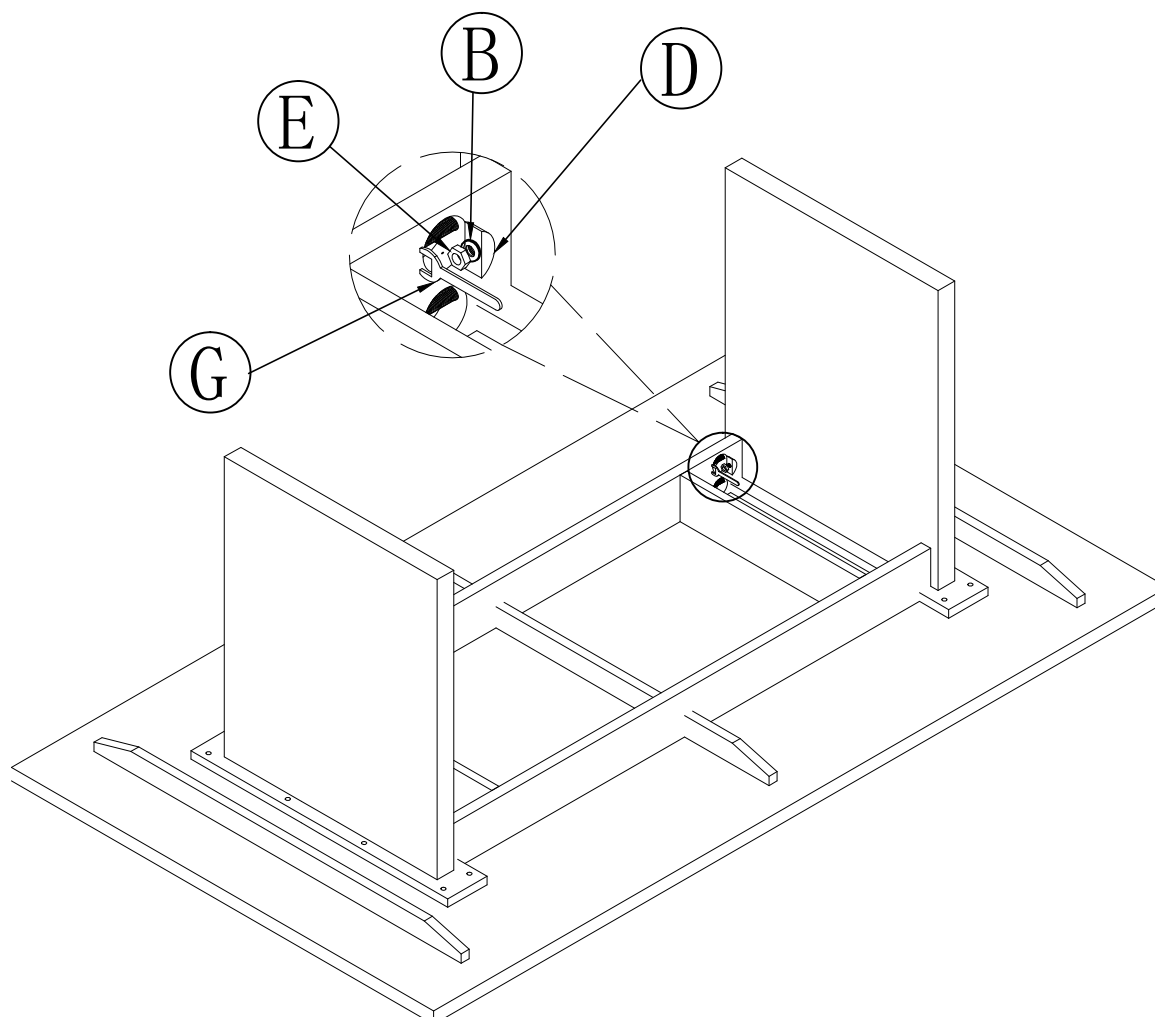

B×8 @ Ø17*Ø8	D×8  M8	E×8  M8	G×1  (14#)
--------------------	--	--	---




MOSMAN DINING TABLE


24595445 /24595537/24595469 /24595506

Step 5,

A×16  M8*35	B×16  Ø17*Ø8	C×1  M5	H×16  M8
--	--	--	---

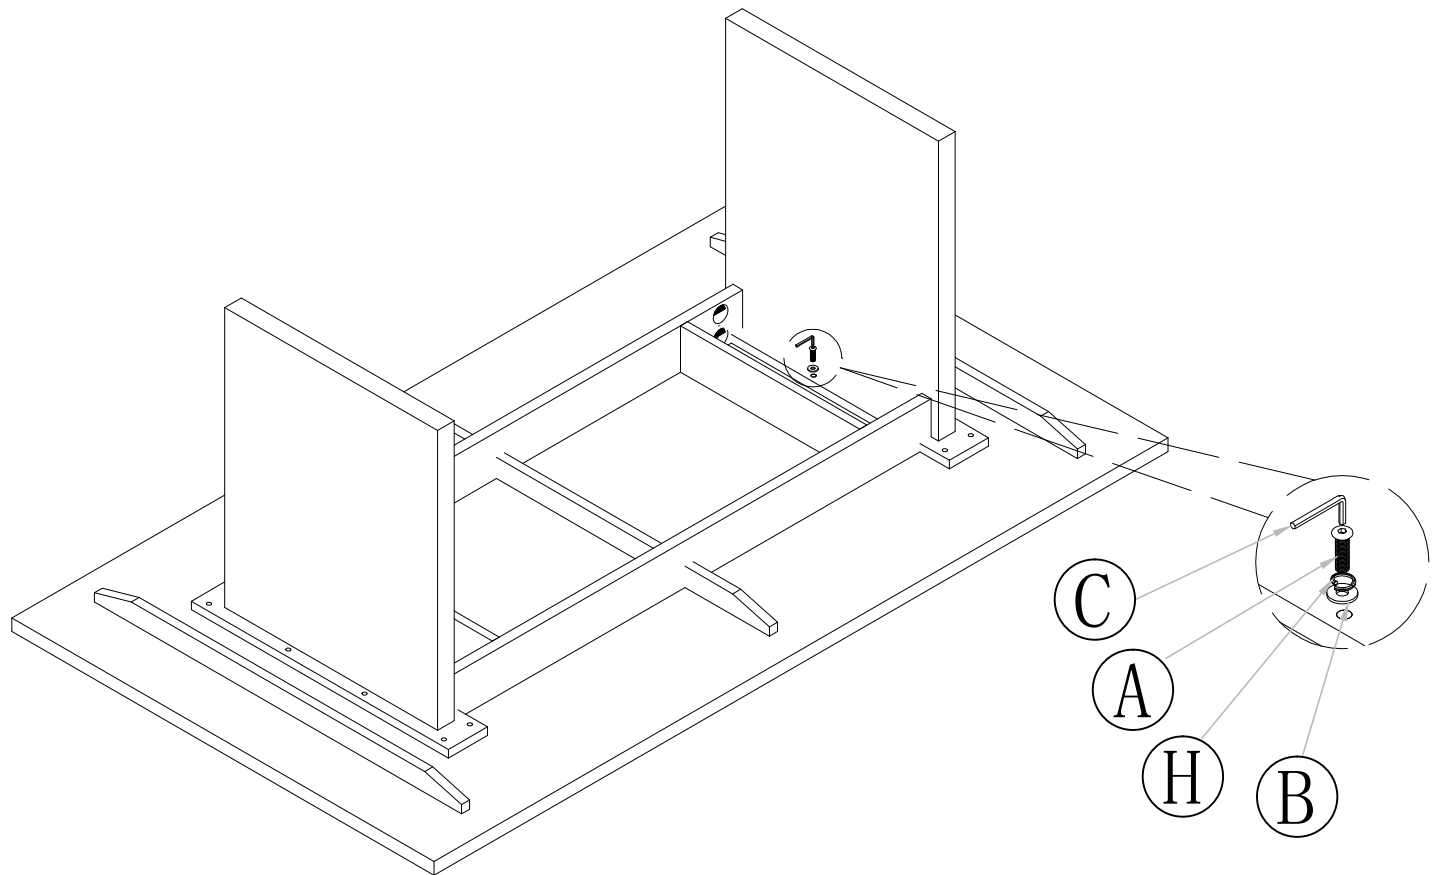 

 Step 6,

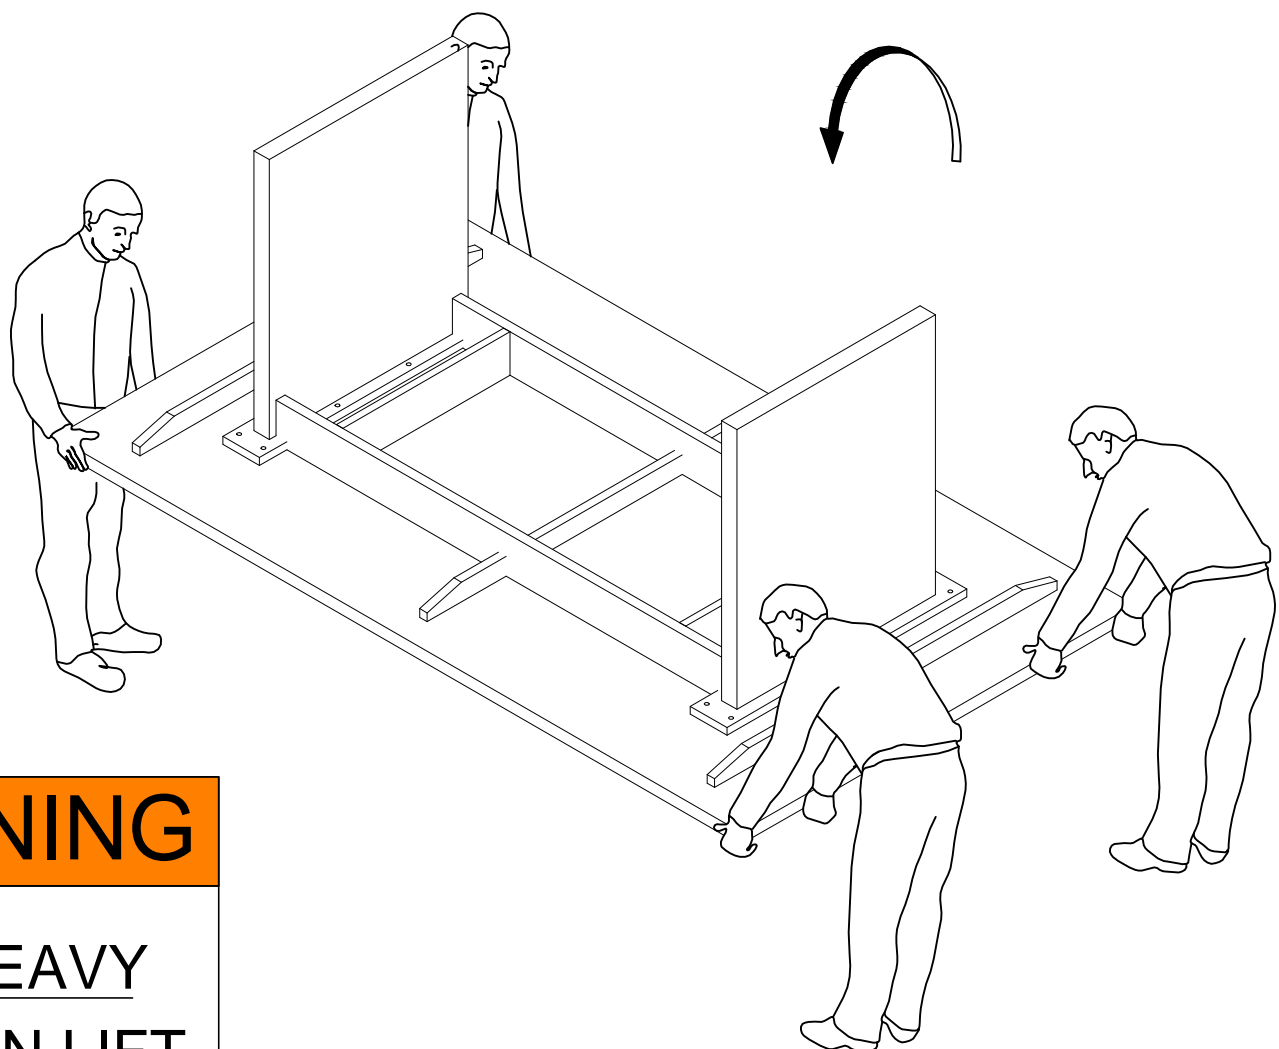

! WARNING
VERY HEAVY
4× PERSON LIFT

MOSMAN DINING TABLE

24595445 /24595537/24595469 /24595506

Finished

