EDWIN SIDE TABLE BLACK 24603577



Thank you for purchasing the Edwin Side Table Black. Before you begin to assemble your new piece of furniture, please check to ensure that all hardware and parts have been supplied. This page lists all contents included in the carton(s).

Follow instructions closely as deviation from them may present a possible safety risk and may void your warranty.

It is recommended that assembly is done on a soft surface such as carpet to avoid any damage.

If you experience any problems with your new purchase, please contact Customer Service via the website www.freedom.com.au or www.freedomfurniture.co.nz

Care Information

This product is suitable for Occasional Outdoor Use or Undercover

- This refers to outdoor furniture that is not designed for permanent outdoor use. It is recommended for use in outdoor under cover areas only.
- Concrete resin is a very resiliant product however care should be taken to ensure the longevity of the product.
- Do not leave any oils lying on the surface, wipe them away with a cloth immediately after any spillage.
- Avoid placing heat directly onto the surface, as it may cause discolouration to the sealer and permanent damage.
- Avoid abrasive soaps and cleansers. Freedom recommend a mild, nonabrasive, non-ammonia soap for everyday cleaning.
- Clean up spills immediately extended exposure to foods and liquids may cause staining of the surface.



