

ARTHUR COFFEE TABLE 140X70CM OFF WHITE

24660525



Thank you for choosing the **Arthur Coffee Table 140x70cm Off White**. Before you start assembling your new furniture piece, please ensure that all the necessary hardware and parts have been included. This page provides a comprehensive list of the contents found in the carton(s).

For your safety and to maintain the warranty, it is important to follow these instructions closely. Any deviation may pose a safety risk and could void your warranty.

We recommend assembling the lounge set on a soft surface, such as carpet, to prevent any potential damage.

If you encounter any issues with your purchase, our Customer Service team is here to assist you. You can reach out to us via our website at www.freedom.com.au or www.freedomfurniture.co.nz

Care Information

Full Outdoor Use Remove Cushion When Not In Use

This refers to sofas and pieces where the furniture can be kept outdoors. Take care to remove cushions and store inside or in a dry area when not in use. Please read the care label for more information.

- Clean and oil timber furniture regularly (at least monthly) Remove oil and dirt with a stiff brush and use our 'Outdoor Timber Cleansing Wash'. Apply "Outdoor Timber Protective Oil" with a clean cloth or a paintbrush. Leave for a few hours and wipe off excess.
- To prolong the products life span, store in a dry location when not in use or during periods of inclement weather.
- Expansion and contraction of timbers will occur with changes in humidity and temperature. This can cause timber to split which is natural and not considered a fault. Over time, all wooden furniture will naturally change to a grey colour when left exposed to the elements.

ARTHUR COFFEE TABLE 140X70CM OFF WHITE

24660525

Timber Care

We recommend using Freedom Timber Outdoor Protection Kit. It has been formulated in Australia to help nourish and protect your timber from UV, wind and rain damage when used as directed.

How to use the Outdoor Protection Kit.



It is recommended the following care is performed every 2 months.

1. Remove any cushions.
2. Using a dust pan brush, remove any excess dirt or dust from the surface of the outdoor timber.
3. Slightly dampen the microfiber cloth supplied with clean water then spray the Cleansing Wash onto cloth from approximately 10cm away. Allow the mist to evenly disperse onto the cloth.
4. With the cloth, clean timber furniture thoroughly, ensuring no dirt or grime is left on surface. Allow the surface to dry. Avoid applying to other surfaces.
NOTE: On unoiled or un-lacquered surfaces, the Protective Oil will naturally darken the timber. Test in an inconspicuous area first if unsure.
5. Pour a small amount of the Protective Oil onto the outdoor timber furniture and evenly spread with the micro fiber cloth until the timber surface is completely covered. Avoid applying to other surfaces. Allow the oil to dry and penetrate the timber for at least 12 hours before use.
6. Wash cloth with clean water and dry.

ARTHUR COFFEE TABLE 140X70CM OFF WHITE

24660525

Finished.

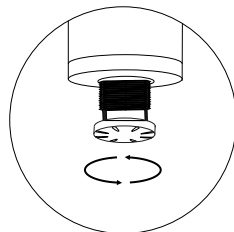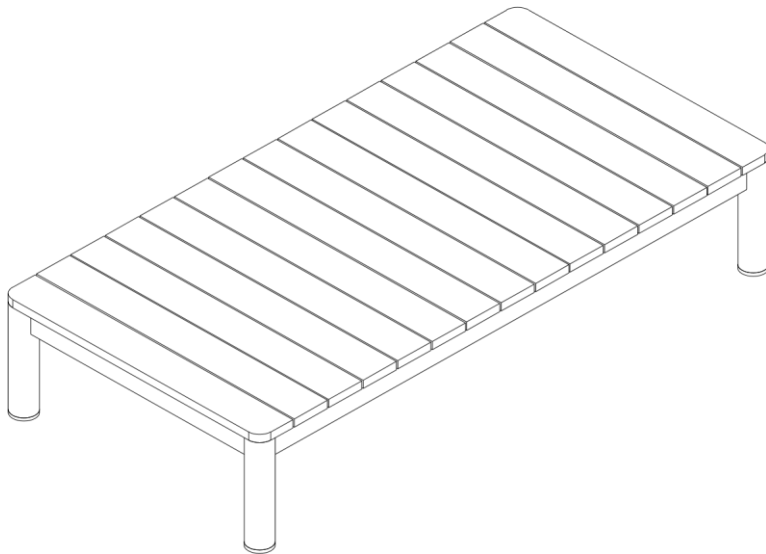

use adjusters at base of the feet if ground is uneven.