

# KASPER TABLE LAMP

24531931, 24690553

Thank you for purchasing the **Kasper Table Lamp**. Before you begin to assemble your new lamp, please check to ensure that all hardware and parts have been supplied. This page lists all contents included in the carton(s).

Follow instructions closely as deviation from them may present a possible safety risk and may void your warranty.

It is recommended that assembly is done on a soft surface such as carpet to avoid any damage.

If you experience any problems with your new purchase, please contact Freedom Customer Service via [www.freedom.com.au](http://www.freedom.com.au) (Australia) or [www.freedomfurniture.co.nz](http://www.freedomfurniture.co.nz) (New Zealand).

## Care Information:

Periodically check and re-tighten all fasteners. Wipe down surfaces using a clean cloth weekly. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard. Ensure screws are fastened firmly as small parts may present a choking hazard.

## Replacing the bulb:

Disconnect the plug from the electrical supply and allow the bulb and lamp to cool down,

Replace the bulb with an **E14 MAX 40W** Incan or **E14 MAX 10W LED**.

Re-connect the supply and turn on.

## Specifications:

**230-240V ~ 50Hz**

**IP20-Indoor Use only**



**E14 Max.40W**  or

**E14 Max.10W** 

**(bulb not included)**

**Class II protection**

