Avery Outdoor Side Table 50cm Aluminium Off White 24971133

Out door

Thank you for choosing the **Avery Outdoor Side Table 50cm**. Before you start assembling your new furniture piece, please ensure that all the necessary hardware and parts have been included. This page provides a comprehensive list of the contents found in the carton(s).

For your safety and to maintain the warranty, it is important to follow these instructions closely. Any deviation may pose a safety risk and could void your warranty.

We recommend assembling the table on a soft surface, such as carpet, to prevent any potential damage.

If you encounter any issues with your purchase, our Customer Service team is here to assist you. You can reach out to us via our website at www.freedom.com.au or www.freedomfurniture.co.nz

Care Information

Full outdoor use

This refer to sofas and pieces where the furniture can be kept outdoors. Store inside or in a dry area when not in use. Please read the care label for more information.

- Furniture made with aluminium can be simply washed down with warm soapy water and left to dry naturally. Do this at least twice a year
- To prolong the products life span, store in a dry location when not in use or during periods of inclement weather.
- While every effort has been made to provide comprehensive care instructions, Freedom Furniture cannot be held responsible for any damage resulting from improper use, neglect, or failure to follow the recommended maintenance guidelines.

Avery Outdoor Side Table 50cm

Aluminium Off White
24971133

For further information on timber care and products please contact Freedom.

How to use the Outdoor Protection Kit (sold separately) .
It is recommended the following care is performed every 2 months.

1. Slightly dampen the microfiber cloth supplied with clean water then spray the Cleansing Wash onto cloth from approximately 10cm away. Allow the mist to evenly disperse onto the cloth.
2. Wash cloth with clean water and dry.

Avery Outdoor Side Table 50cm
Aluminium Off White
24971133

PARTS

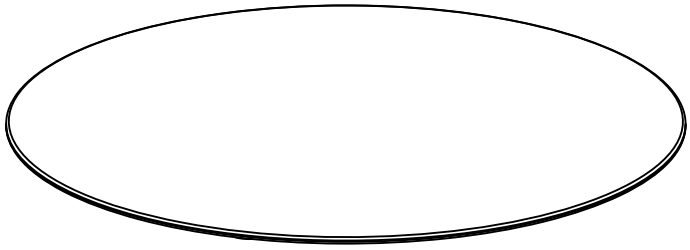

Part A x 1



Part B x 4

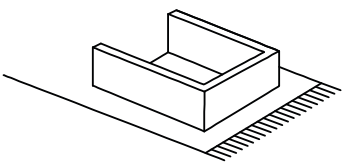

Avery Outdoor Side Table 50cm
Aluminium Off White
24971133

Step 1: Attach the 4 table legs (Part B) to the tabletop (Part A).

Turn the table legs (Part B) follow a clockwise direction and tighten them.

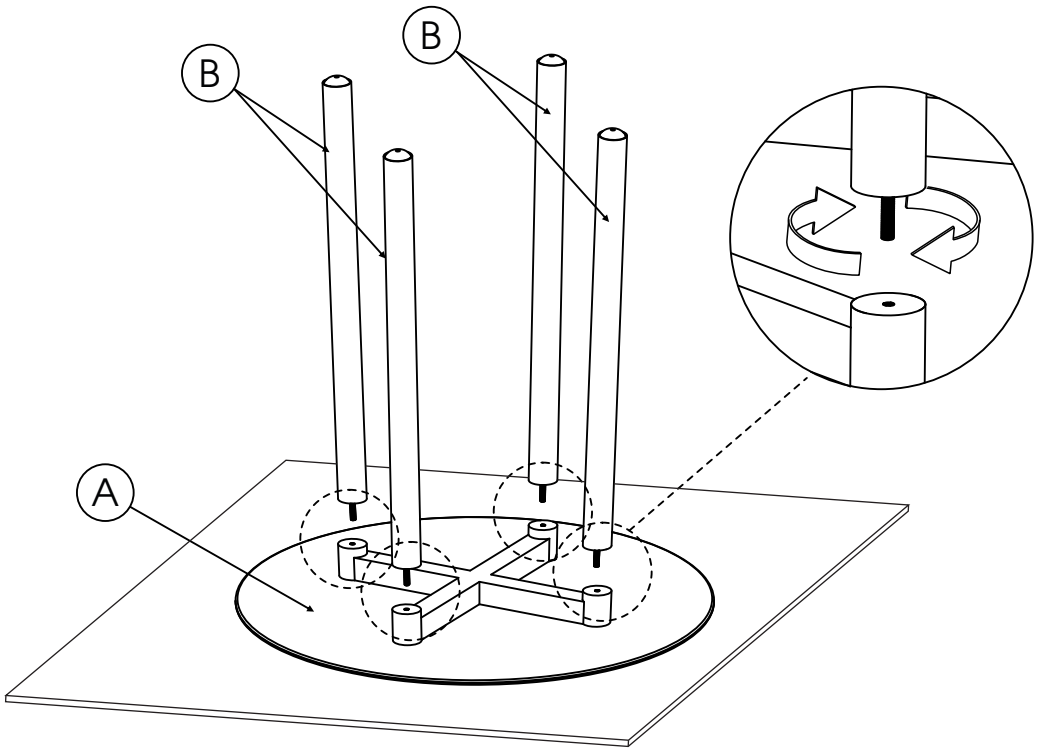

NOTE! Carefully place item on a rug or similar to avoid damage

Avery Outdoor Side Table 50cm Aluminium Off White 24971133

Step 2: Adjust the levelers to keep the table balanced.

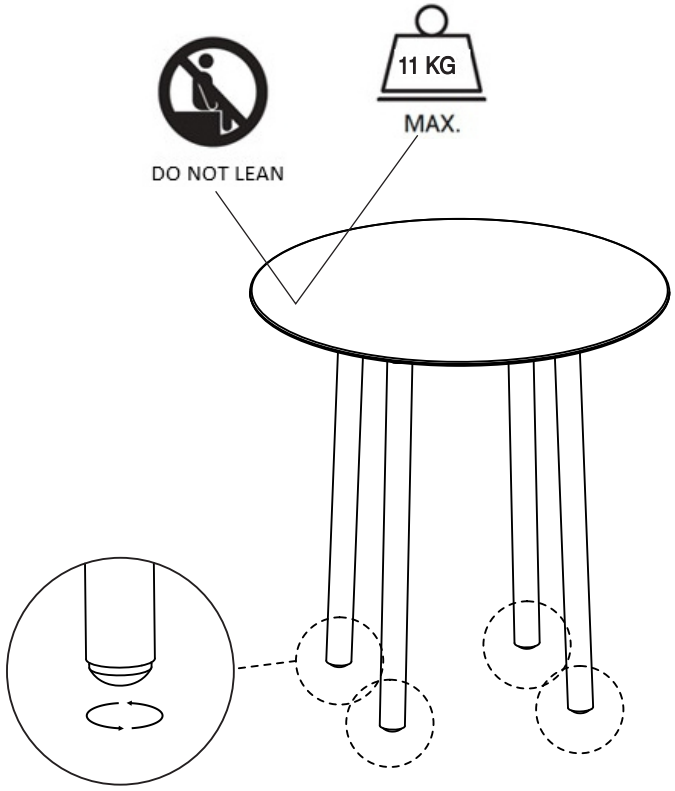

Use the adjusters at the base of the feet if the ground is uneven.
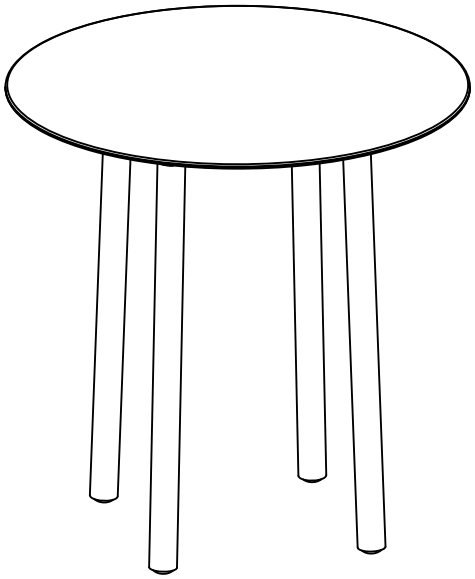
Finished.