

Kattai Armchair Light Grey

24605090



Remove cushions
when not in use

Thank you for purchasing the **Kattai Armchair Light Grey**. Before you begin to assemble your new piece of furniture, please check to ensure that all hardware and parts have been supplied. This page lists all contents included in the carton(s).

Follow instructions closely as deviation from them may present a possible safety risk and may void your warranty.

It is recommended that assembly is done on a soft surface such as carpet to avoid any damage.

If you experience any problems with your new purchase, please contact Customer Service via the website www.freedom.com.au or www.freedomfurniture.co.nz

Care Information

Full Outdoor Use Remove Cushion When Not In Use

This refers to sofas and pieces where the furniture can be kept outdoors. Take care to remove cushions and store inside or in a dry area when not in use. Please read the care label for more information.

- Furniture made with polypropylene and aluminium can be simply washed down with warm soapy water and left to dry naturally. Do this at least twice a year.
- To prolong the products life span, store in a dry location when not in use or during periods of inclement weather.

Kattai Armchair Light Grey

24605090

Hardware (Supplied)

① x 24




Flat washer
Ø18 x 1 mm

② x 28



F-Bolt 6 x 20 mm

③ x 06



F-Bolt 6 x 40 mm

④ x 32



Flat washer
Ø14 x 1 mm

⑤ x 22



Lock nut 6 x 6 mm

⑥ x 2



Allen key

⑦ x 2









Spanner 10 x 76 mm

Parts

A		Back cushion	1
B1		Left armrest cushion	1
B2		Right armrest cushion	1
C		Seat cushion	1

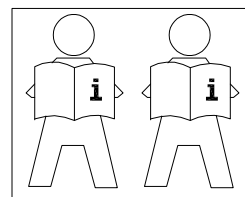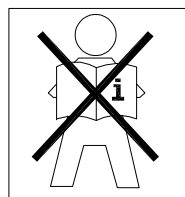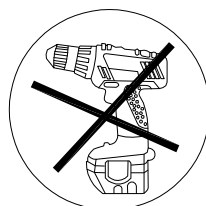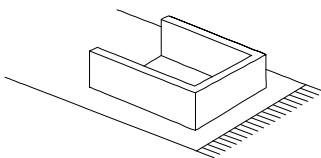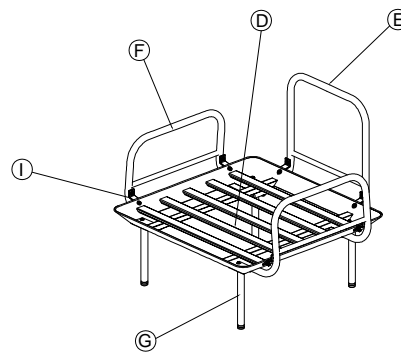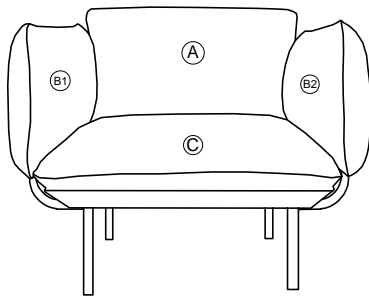


D		Seat frame	1
E		Back frame	1
F		Armrest frame	2
G		Leg	4
I		Bracket	06




30 mins

Kattai Armchair Light Grey



24605090


<p>② x 16</p>  <p>F-Bolt 6 x 20 mm</p>	<p>④ x 32</p>  <p>Flat washer Ø14 x 1 mm</p>	<p>⑤ x 16</p>  <p>Lock nut 6 x 6 mm</p>
---	---	--

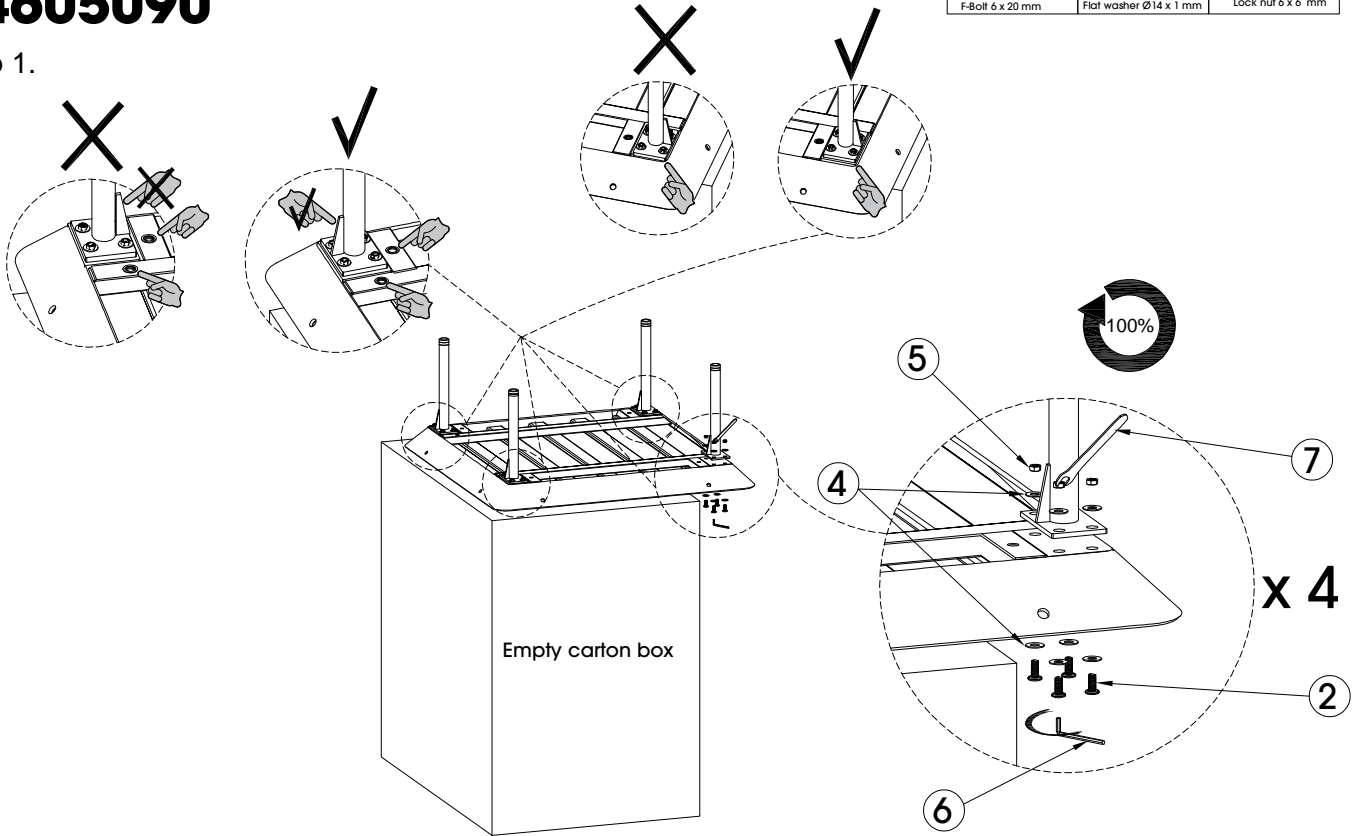Step 1.






Step 2.
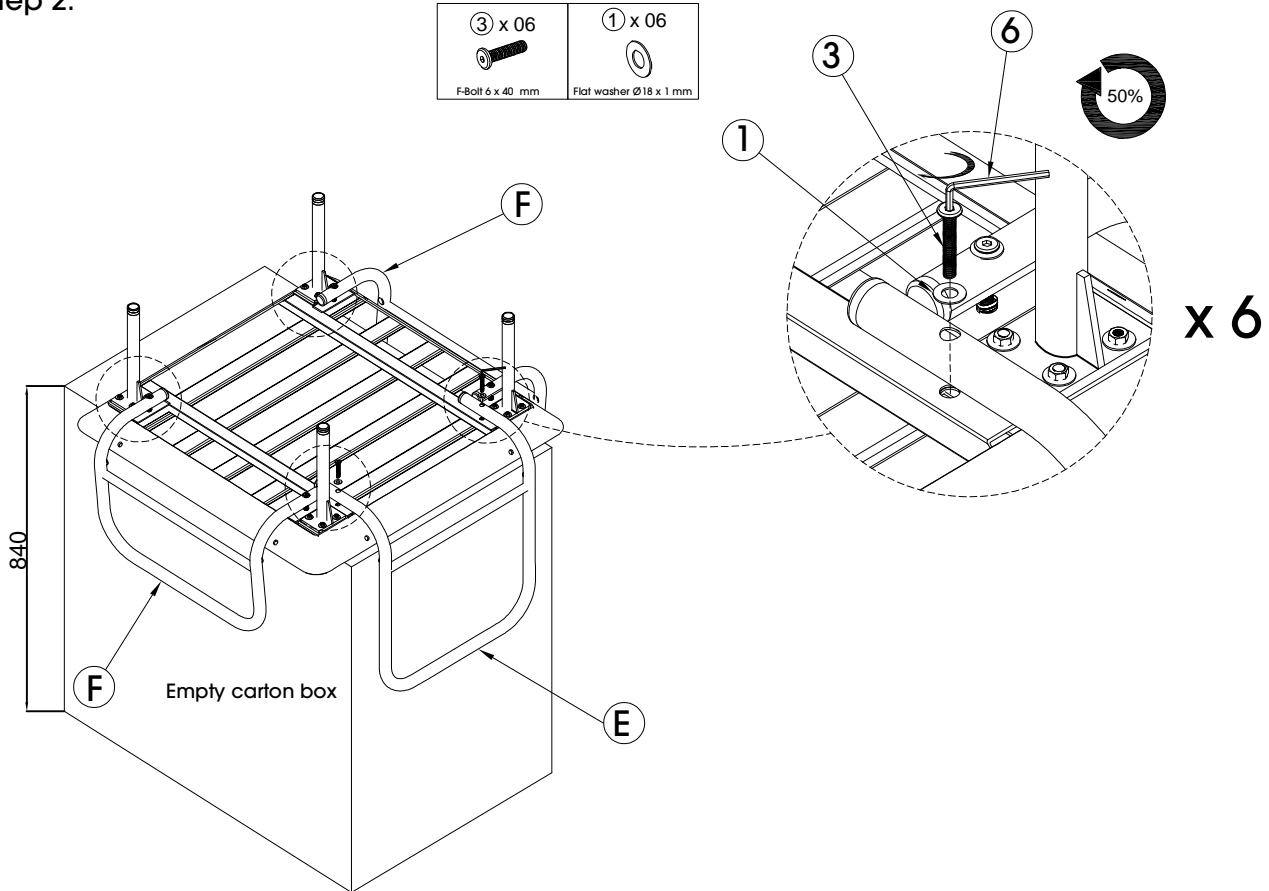
<p>③ x 06</p>  <p>F-Bolt 6 x 40 mm</p>	<p>① x 06</p>  <p>Flat washer Ø18 x 1 mm</p>
---	---




Kattai Armchair Light Grey




24605090


<p>2 x 06</p>  <p>F-Bolt 6 x 20 mm</p>	<p>1 x 06</p>  <p>Flat washer Ø18 x 1 mm</p>	<p>1 x 06</p>  <p>Bracket</p>
---	---	--

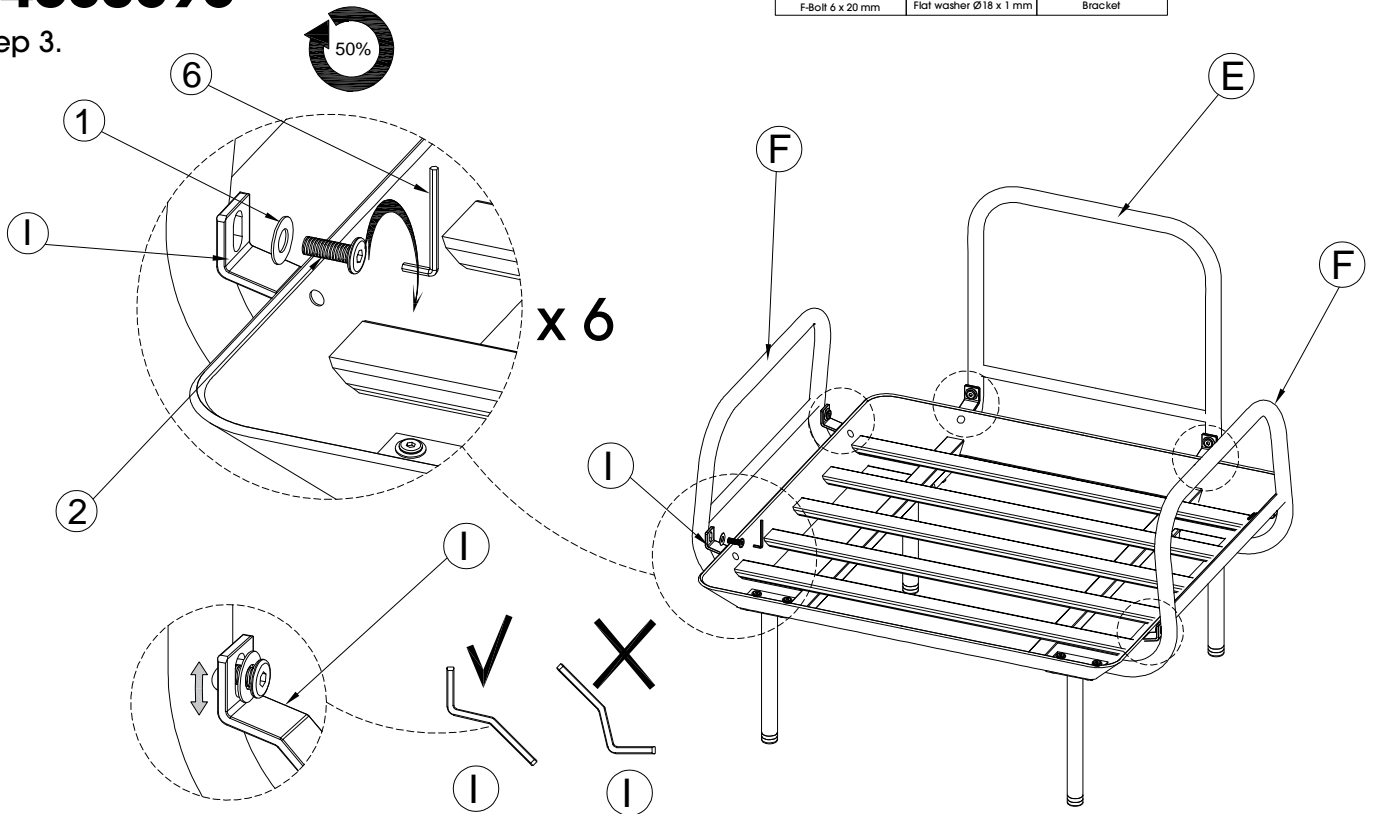Step 3.



Step 4.


<p>2 x 06</p>  <p>F-Bolt 6 x 20 mm</p>	<p>1 x 12</p>  <p>Flat washer Ø18 x 1 mm</p>	<p>5 x 06</p>  <p>Lock nut 6 x 6 mm</p>
---	---	--

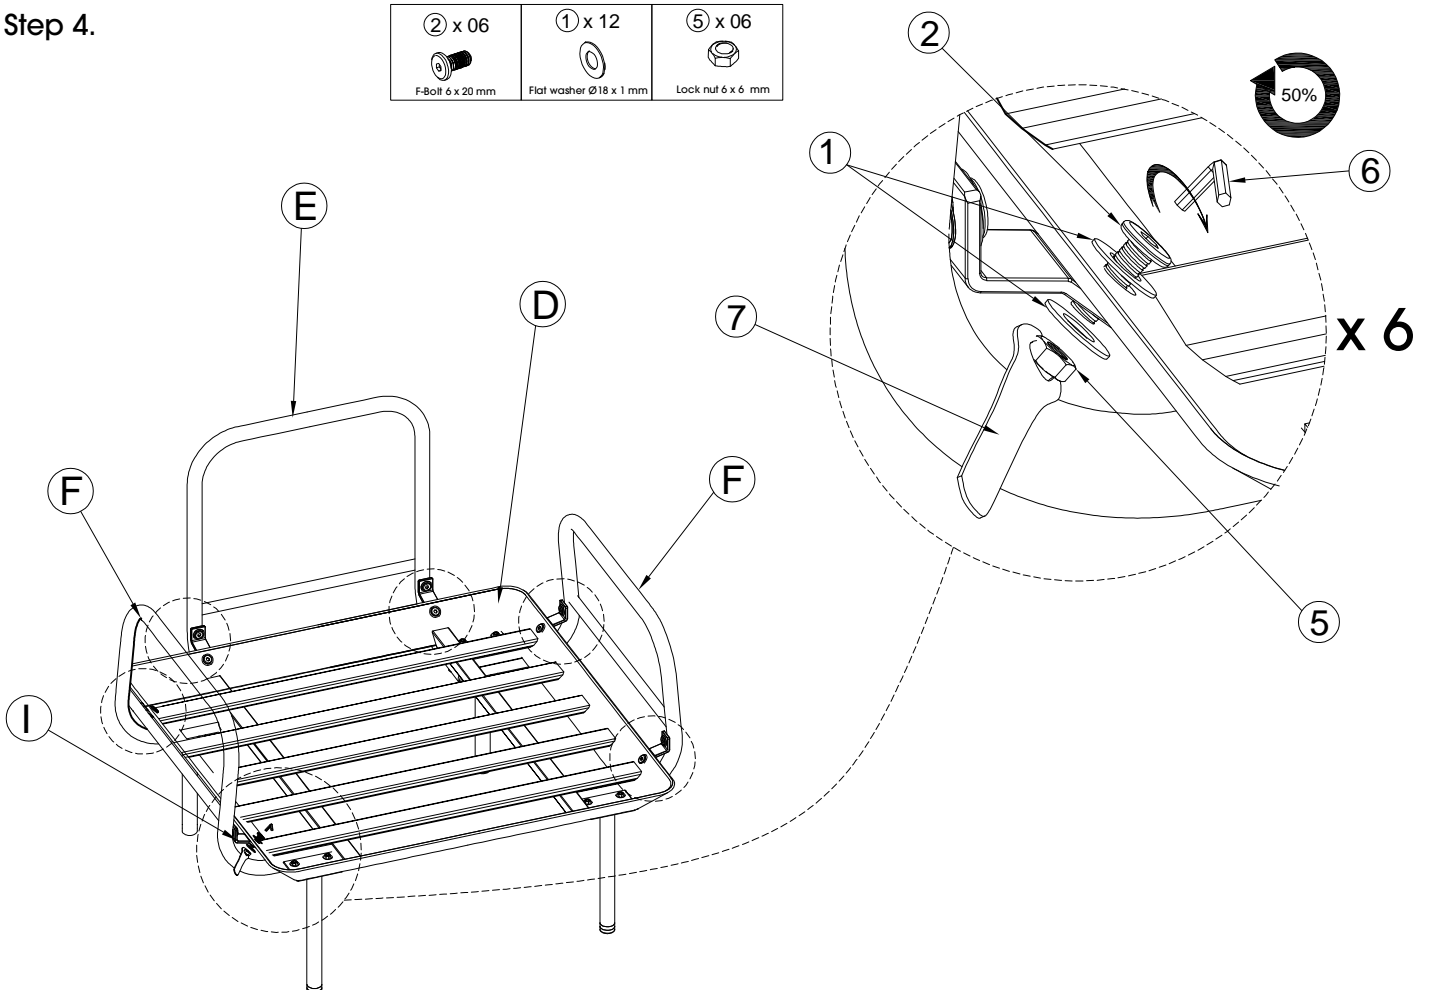


Kattai Armchair Light Grey

24605090

Step 5.

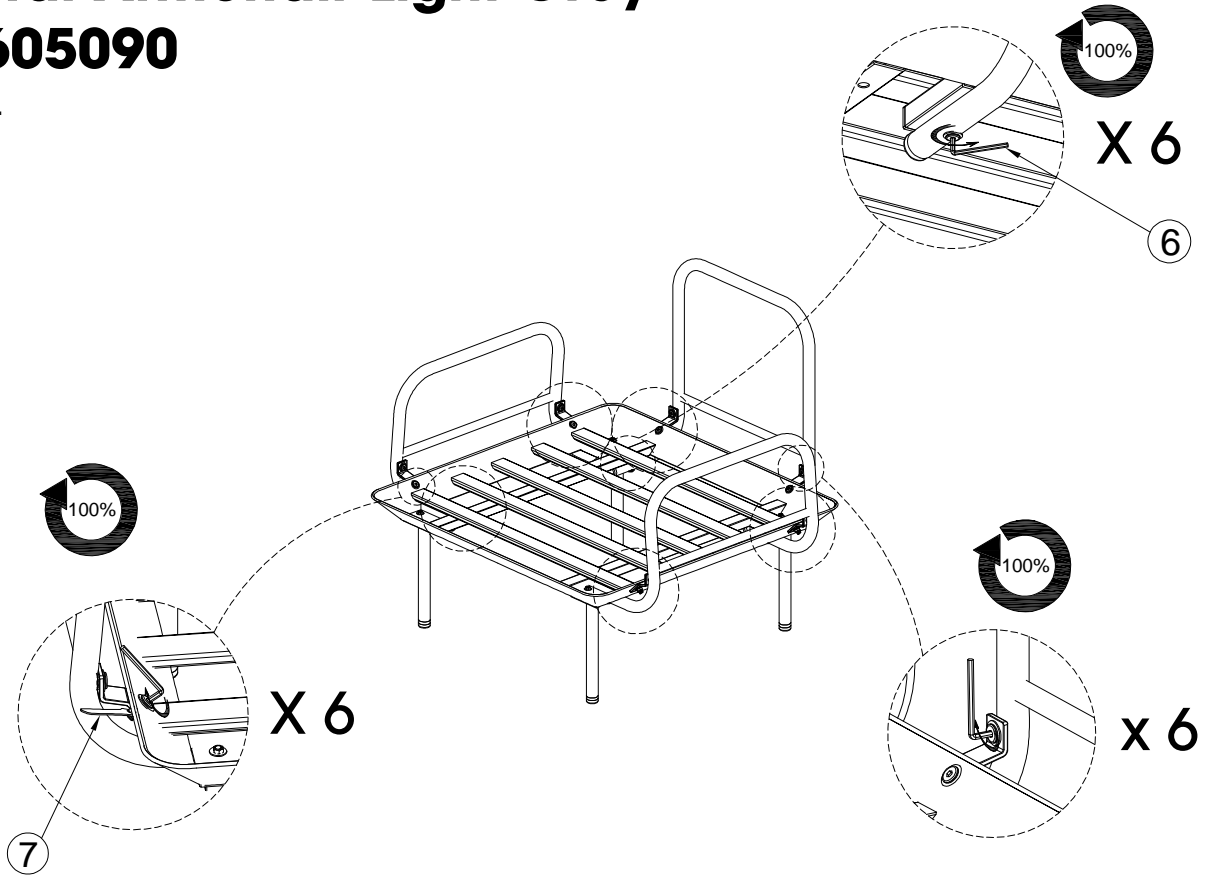


Step 6.

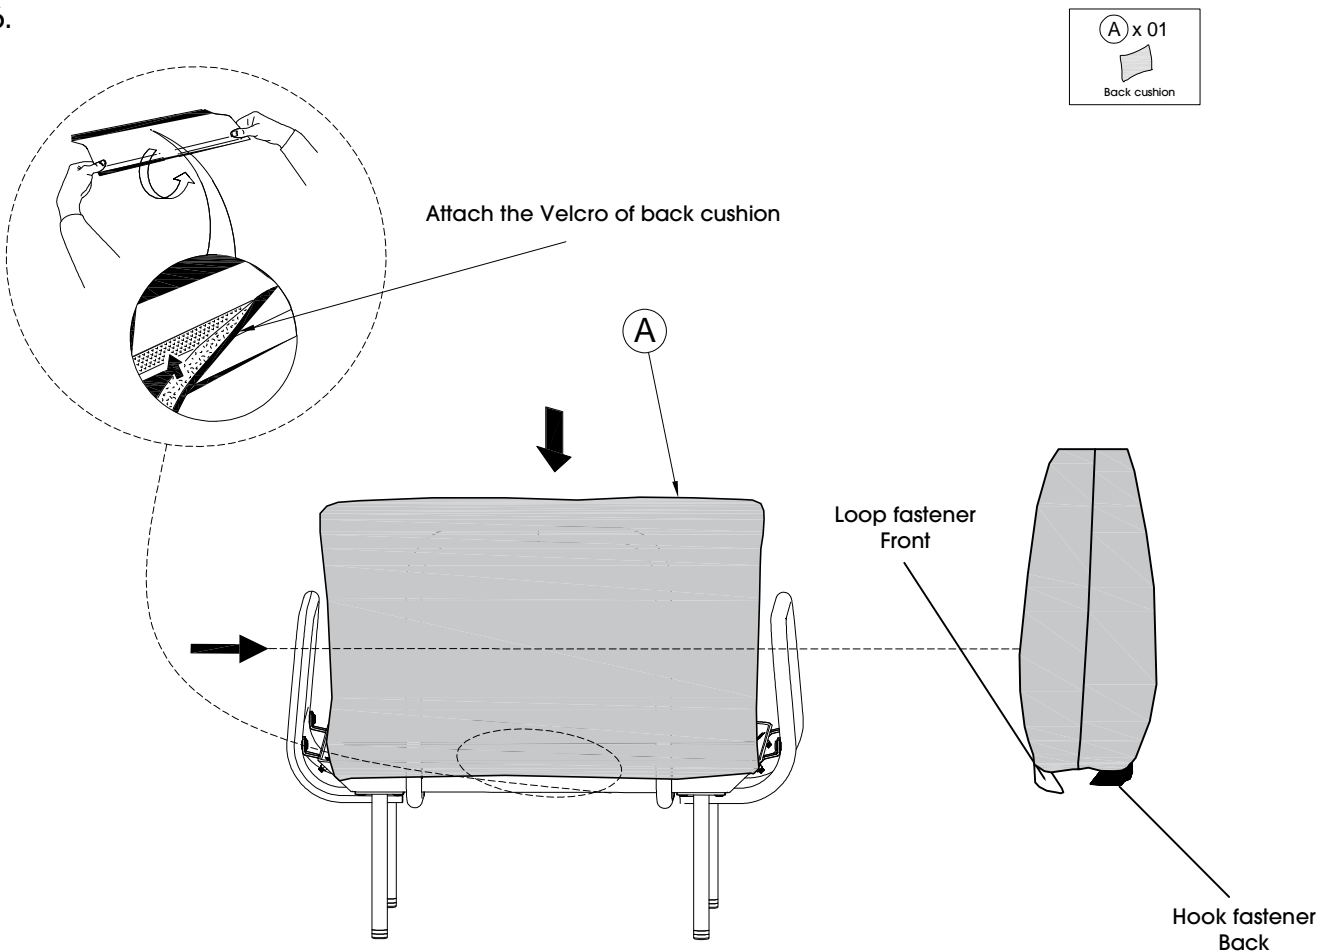


Kattai Armchair Light Grey



24605090

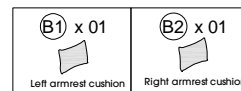

Step 7.

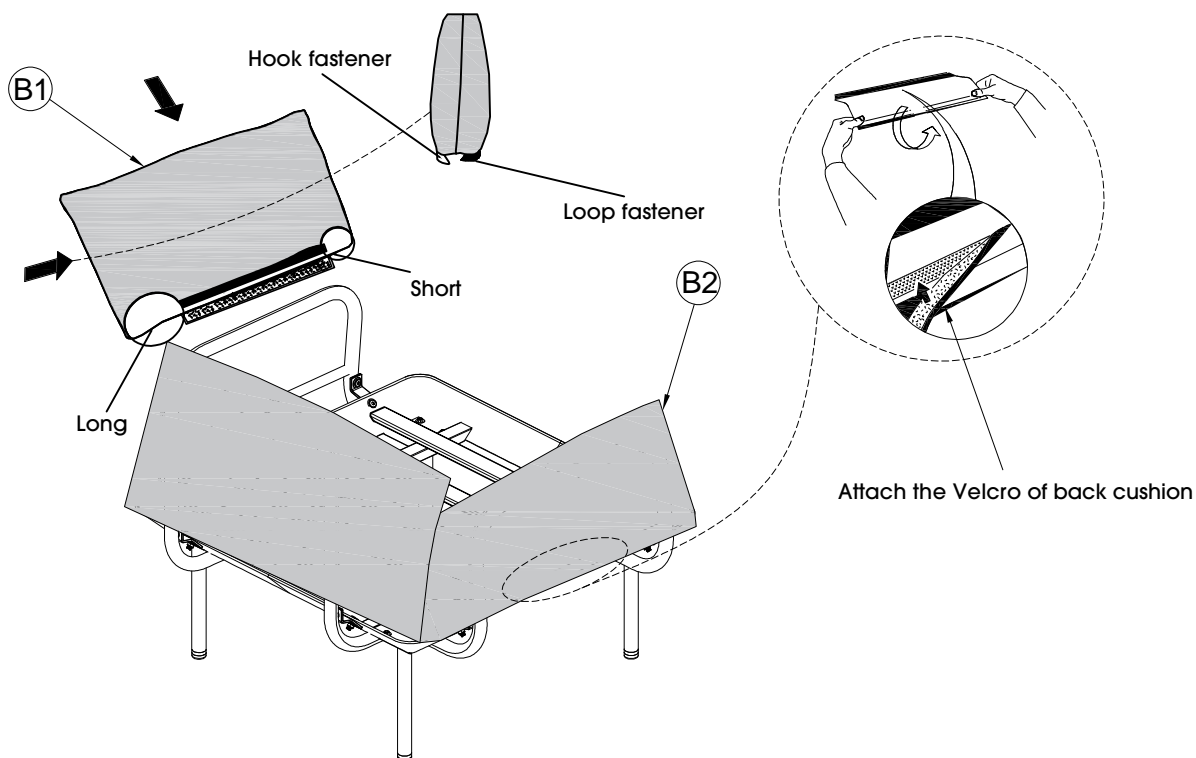

Step 8.

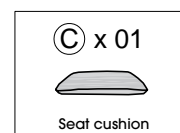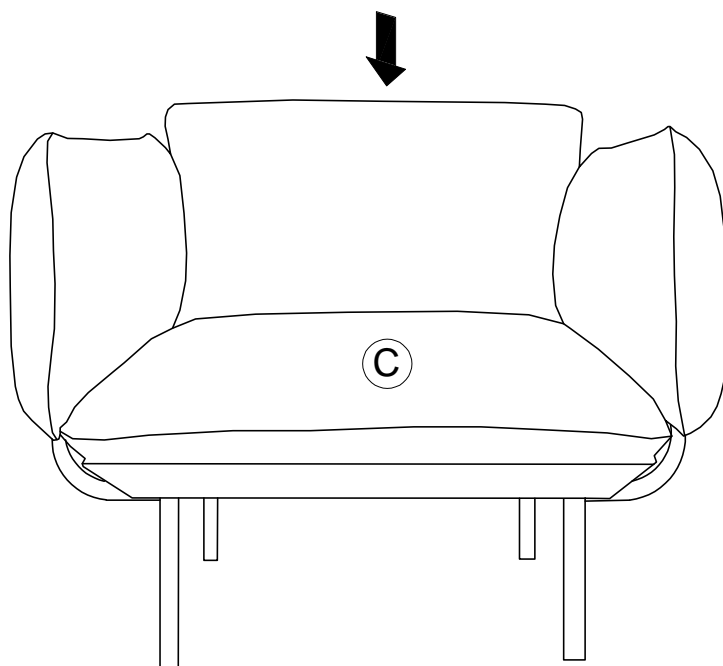

Kattai Armchair Light Grey

24605090

Step 9.

