# AUDREY STANDING FLOOR BRACKET

Thank you for purchasing the Audrey Bed. Before you begin to assemble your new piece of furniture, please check to ensure that all hardware and parts have been supplied. This page lists all contents included in the carton(s).
Follow instructions closely as deviation from them may present a possible safety risk and may void your warranty.
It is recommended that assembly is done on a soft surface such as carpet to avoid any damage.
If you experience any problems with your new purchase please contact Freedom Customer Service via www.freedom.com.au(AUS) and www.freedomfurniture.co.nz (NZ)

## Care Information

### DO

- Vacuum regularly with a soft upholstery attachment. Dirt combined with body moisture can produce a grime discolouration to the fabric. Vacuuming will also remove grit that can also wear away the fabric.
- Follow the upholstery care instructions label attached to the bed.
- Use a professional dry cleaning service at least once a year to keep the fabric looking good. Leave any removable covers on during cleaning to minimise shrinking. Temporary pilling can happen with some fabrics. This isn't considered a fault and can be removed using a de-piling machine.

### DON'T

- Don't place the fabric in direct sunlight or near heaters as they can fade and damage the fabric. Use curtains and blinds to protect your furniture from direct sunlight through windows.
- Don't pull loose threads, cut them instead.

**PARTS.**

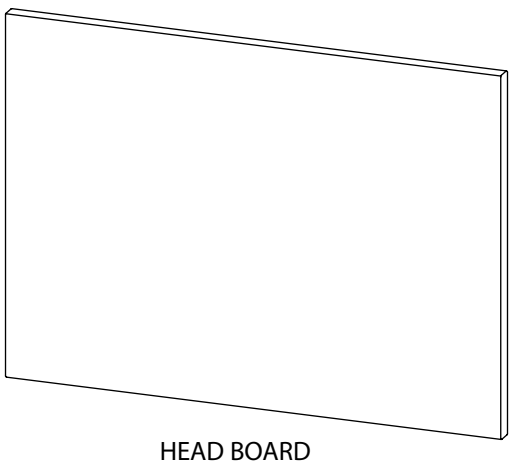

HEAD BOARD
1 x Part A



STANDING FLOOR BRACKET
2 x Part B

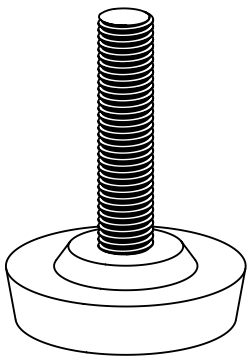

FLOOR BRACKET FEET
4 x Part C

**HARDWARE.**



M8X25
4 x Part D

M8X10
4 x Part E



ALLEN KEY M8
1 x Part F

# AUDREY STANDING FLOOR BRACKET

Step 1.

NOTE: RAISE THE BOTTOM EDGE OF THE HEADBOARD ONTO A STABLE OBJECT (E.G. MATTRESS OR CHAIR) WITH THE REAR OF THE HEADBOARD FACING UPWARDS AS SHOWN IN DIAGRAM.

DASHED LINE IS REFERENCE TO THE FLOOR.

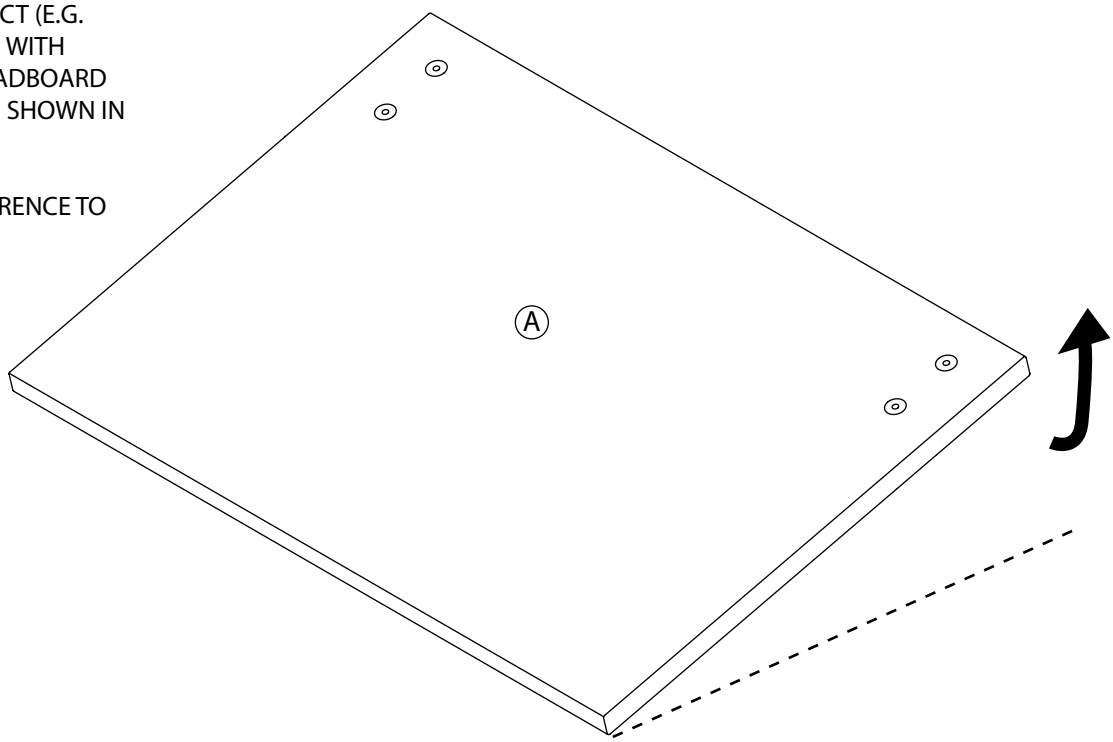


Step 2.

NOTE: ALIGN STANDING FLOOR BRACKETS TO THE ATTACHMENT POSITIONS OF THE BEDHEAD.

FLOOR BRACKET HEIGHT CAN BE ADJUSTED BY USING DIFFERENT HOLES ON BRACKET.

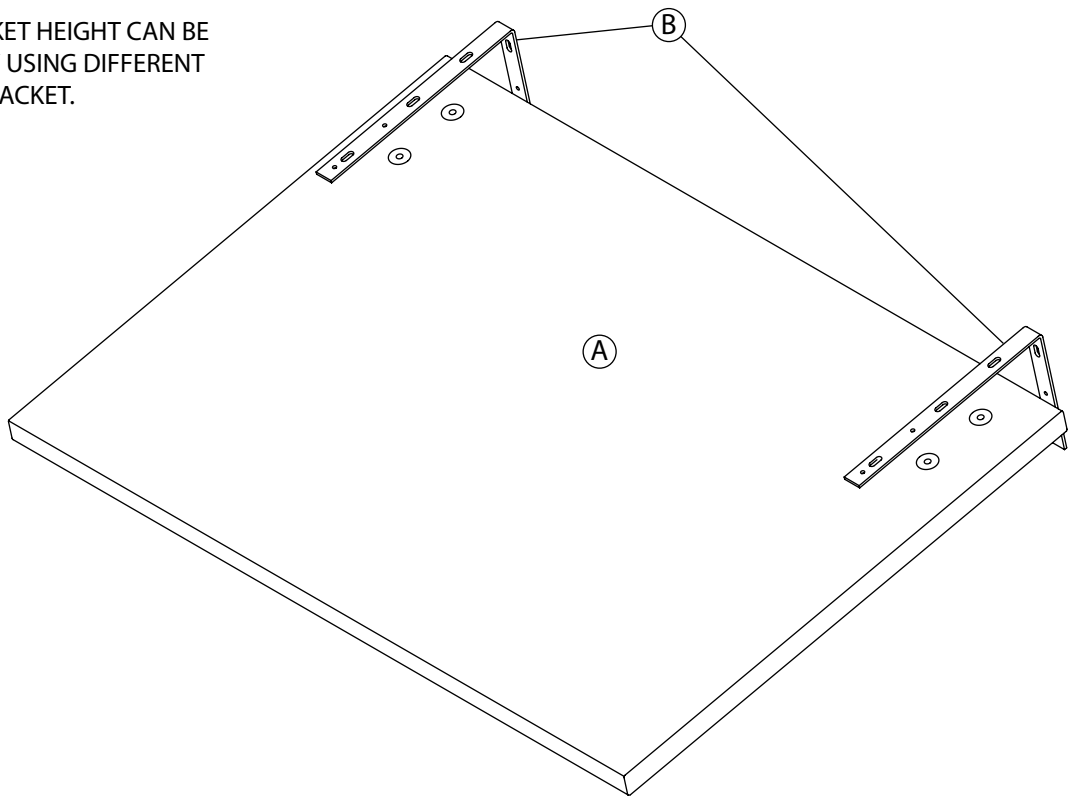

# AUDREY STANDING FLOOR BRACKET

Step 3.

NOTE: ATTACH THE STANDING FLOOR BRACKET SECURELY WITH THE BOLTS AND WASHERS.

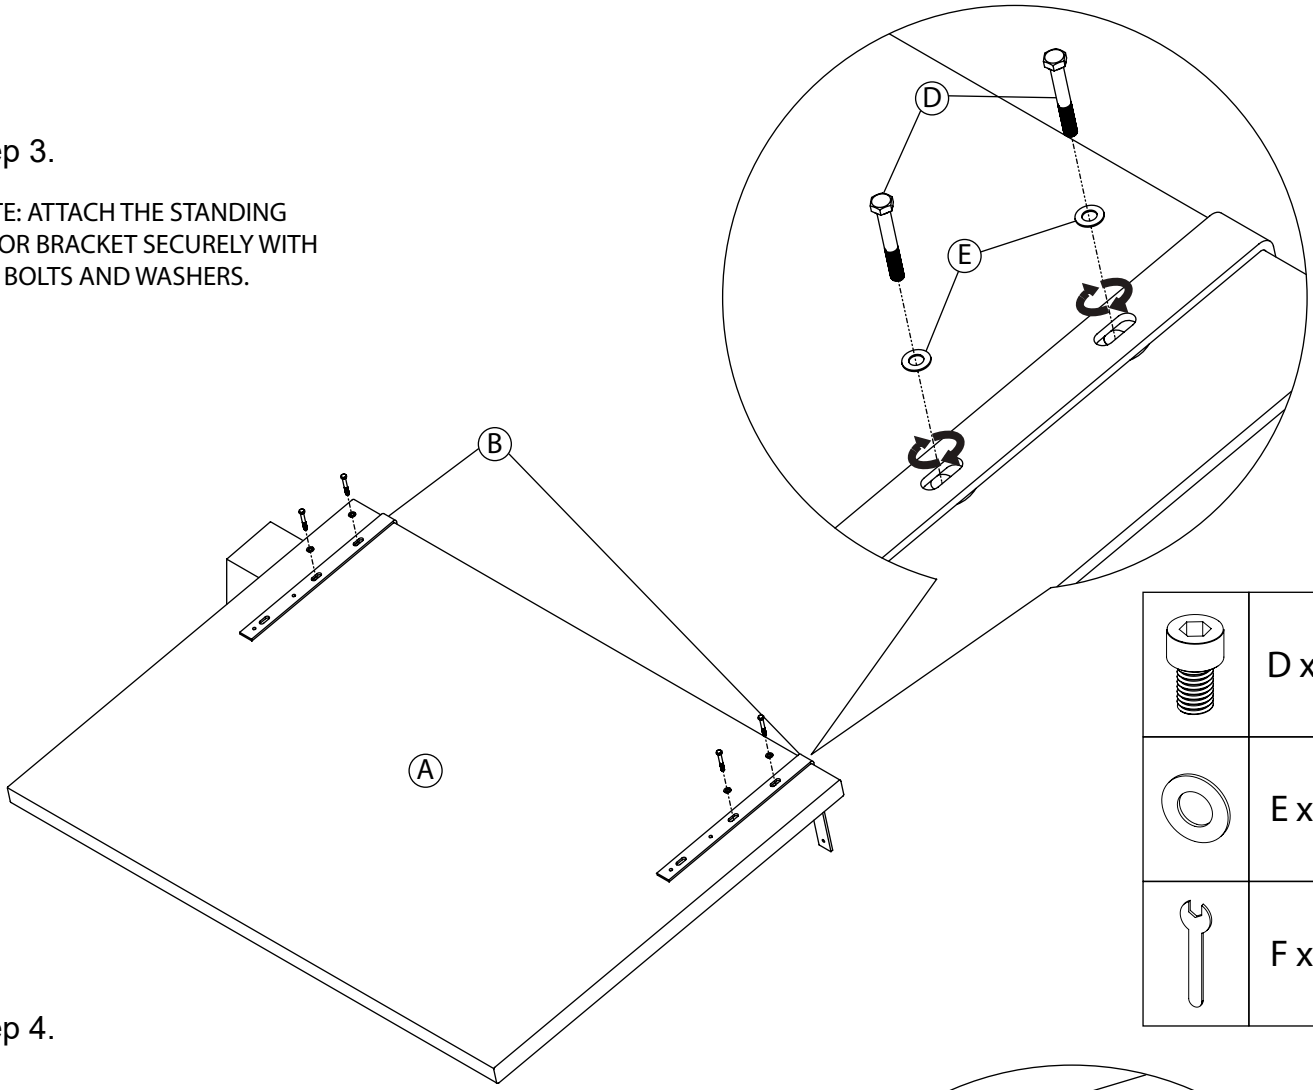


| | |
|---|---|
|  | D x 4pcs |
|  | E x 4pcs |
|  | F x 1pcs |

Step 4.

NOTE: SCREW THE FLOOR BRACKET FEET INTO THE STANDING FLOOR BRACKET, ADJUST TO SUIT BED HEIGHT.

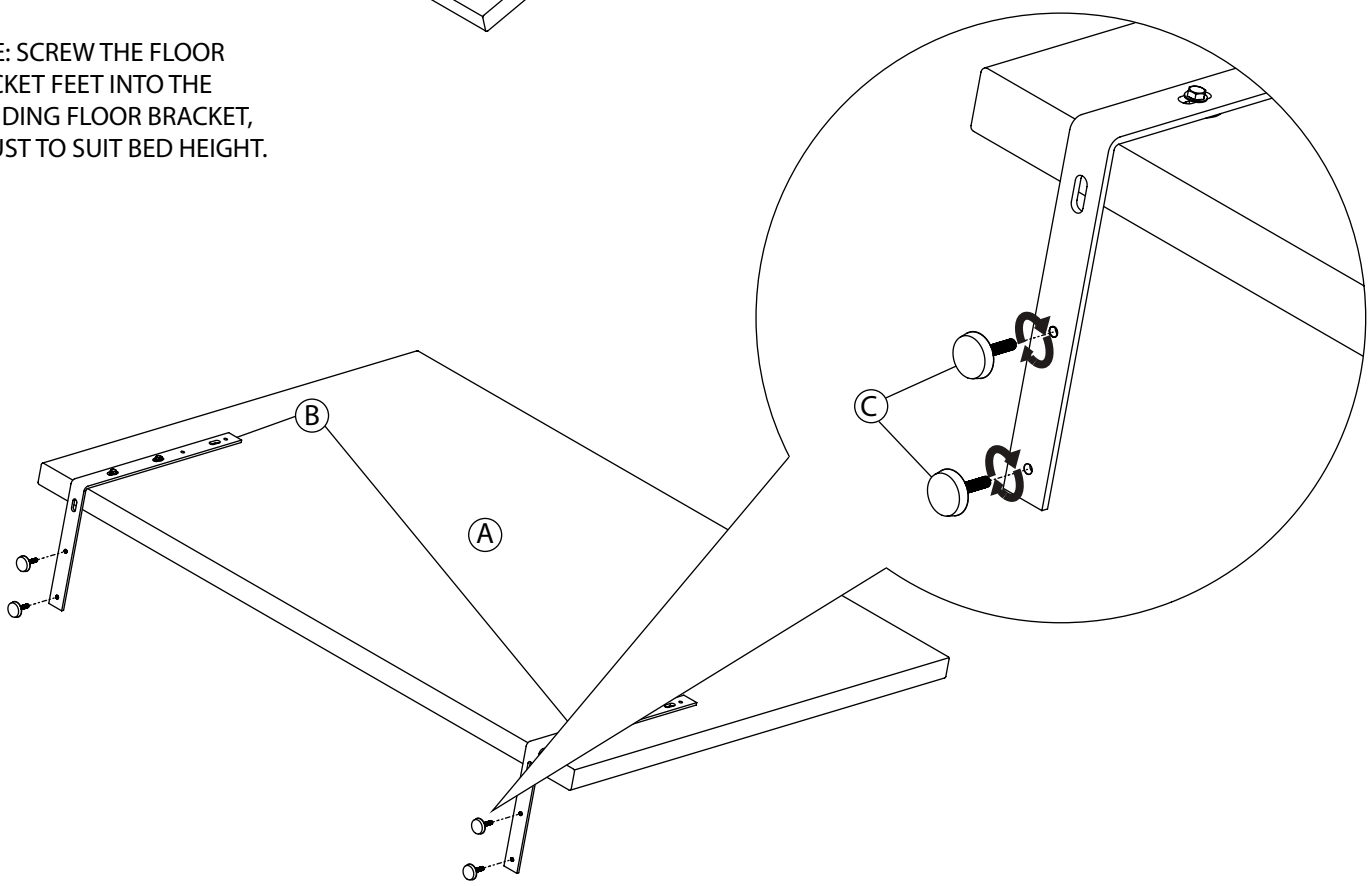

# AUDREY STANDING FLOOR BRACKET

Step 5.

NOTE: BALANCE THE BED HEAD AGAINST A WALL, MOVE THE BED FRAME TO COVER THE FEET AND STABILISE THE BEDHEAD.
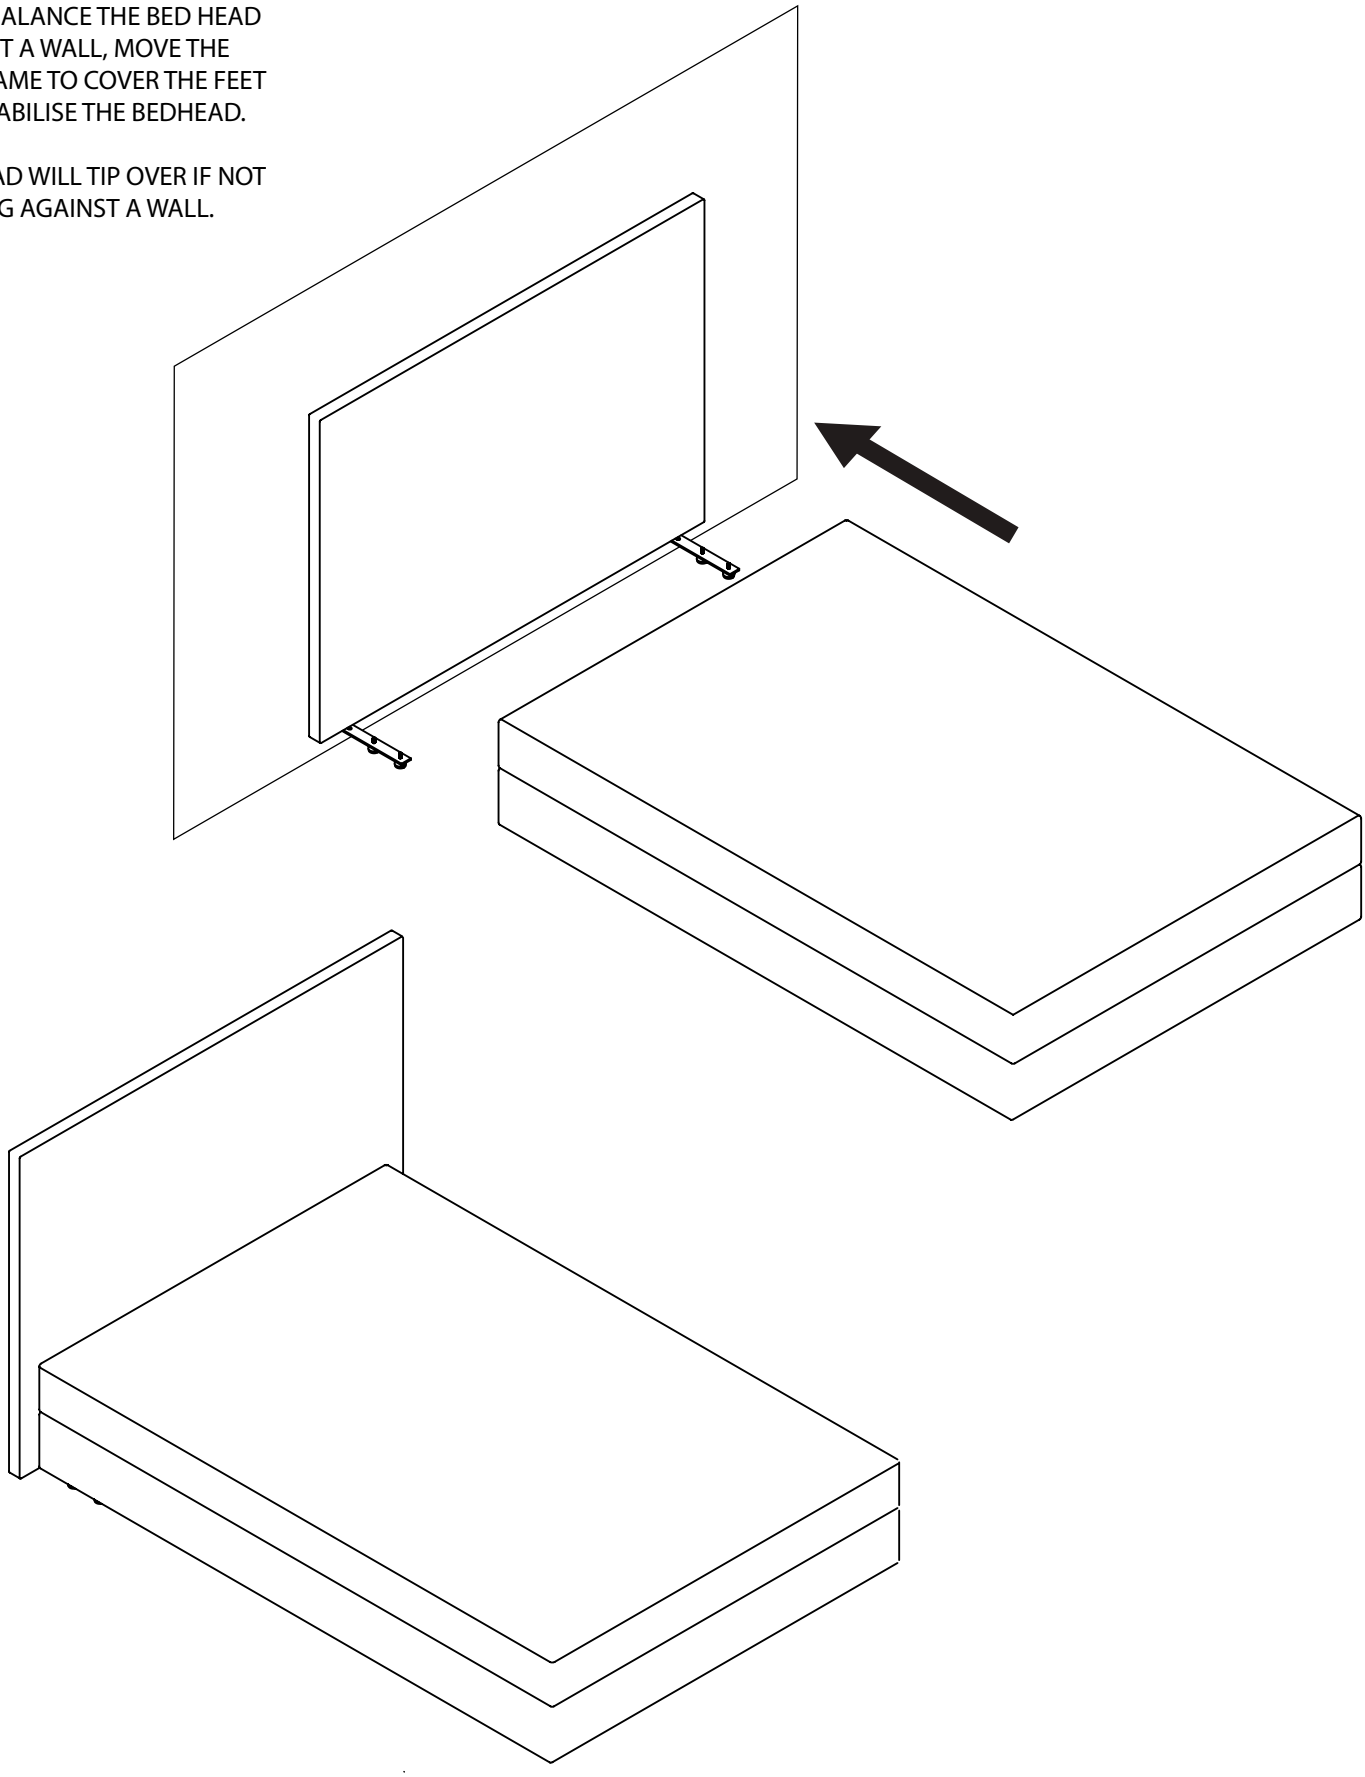
BEDHEAD WILL TIP OVER IF NOT LEANING AGAINST A WALL.